


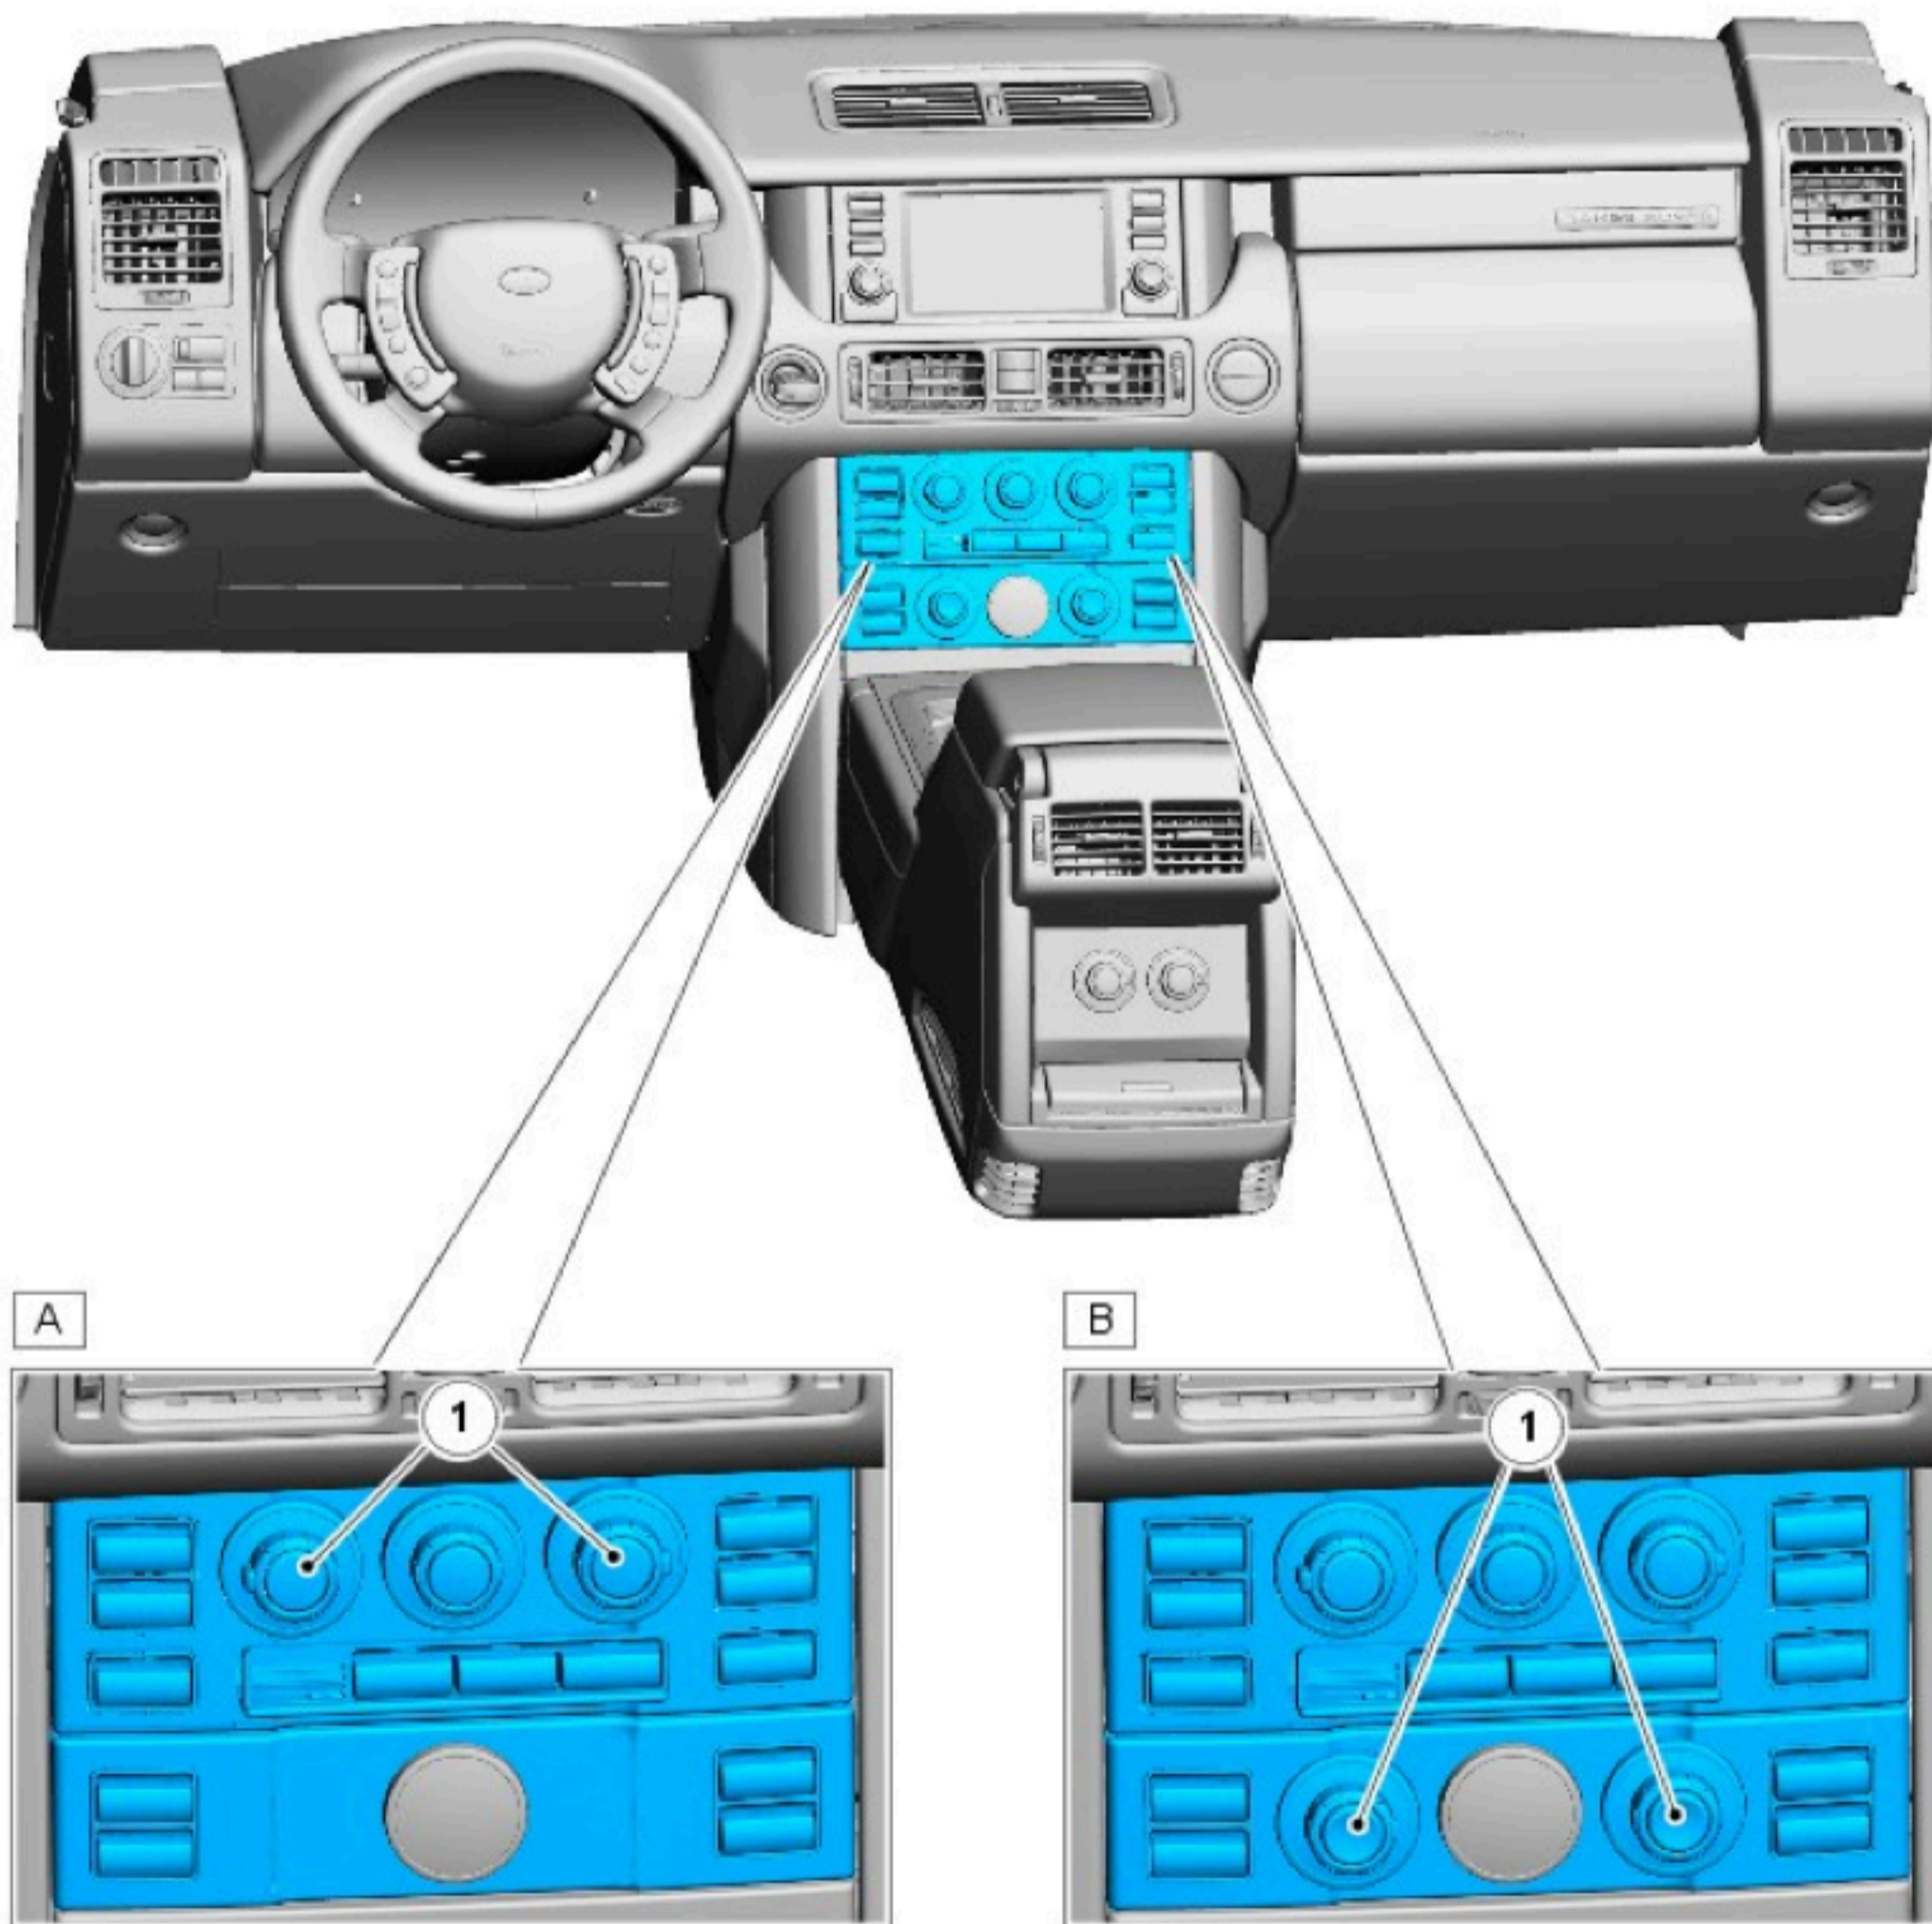
An ignition feed is supplied to each sensor via the relevant seat heater switch.

 **CAUTION:** The seat heaters consume considerable power from the battery. For this reason, they should only be operated while the engine is running.

Operation of the heated seats is controlled by the ATC module. Two push-button switches are mounted in the ATC module panel. Each switch has 2 integral Light Emitting Diodes (LED) to display the level of heating selected. For additional information, refer to: [Control Components](#) (412-04 Control Components, Description and Operation).

## Climatic Seats

### Seat Controls



E84295

Item	Part Number	Description
A	-	Lo-line and hi-line variants with heated front seats
B	-	Hi-line variant with seat climatic control option
1	-	Front seat heater/climatic switches