



Junction box-Battery

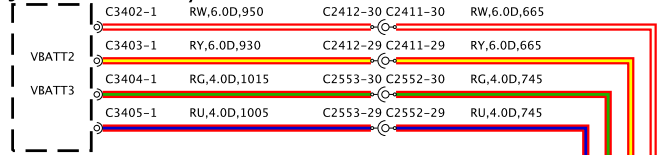


Junction box-Central

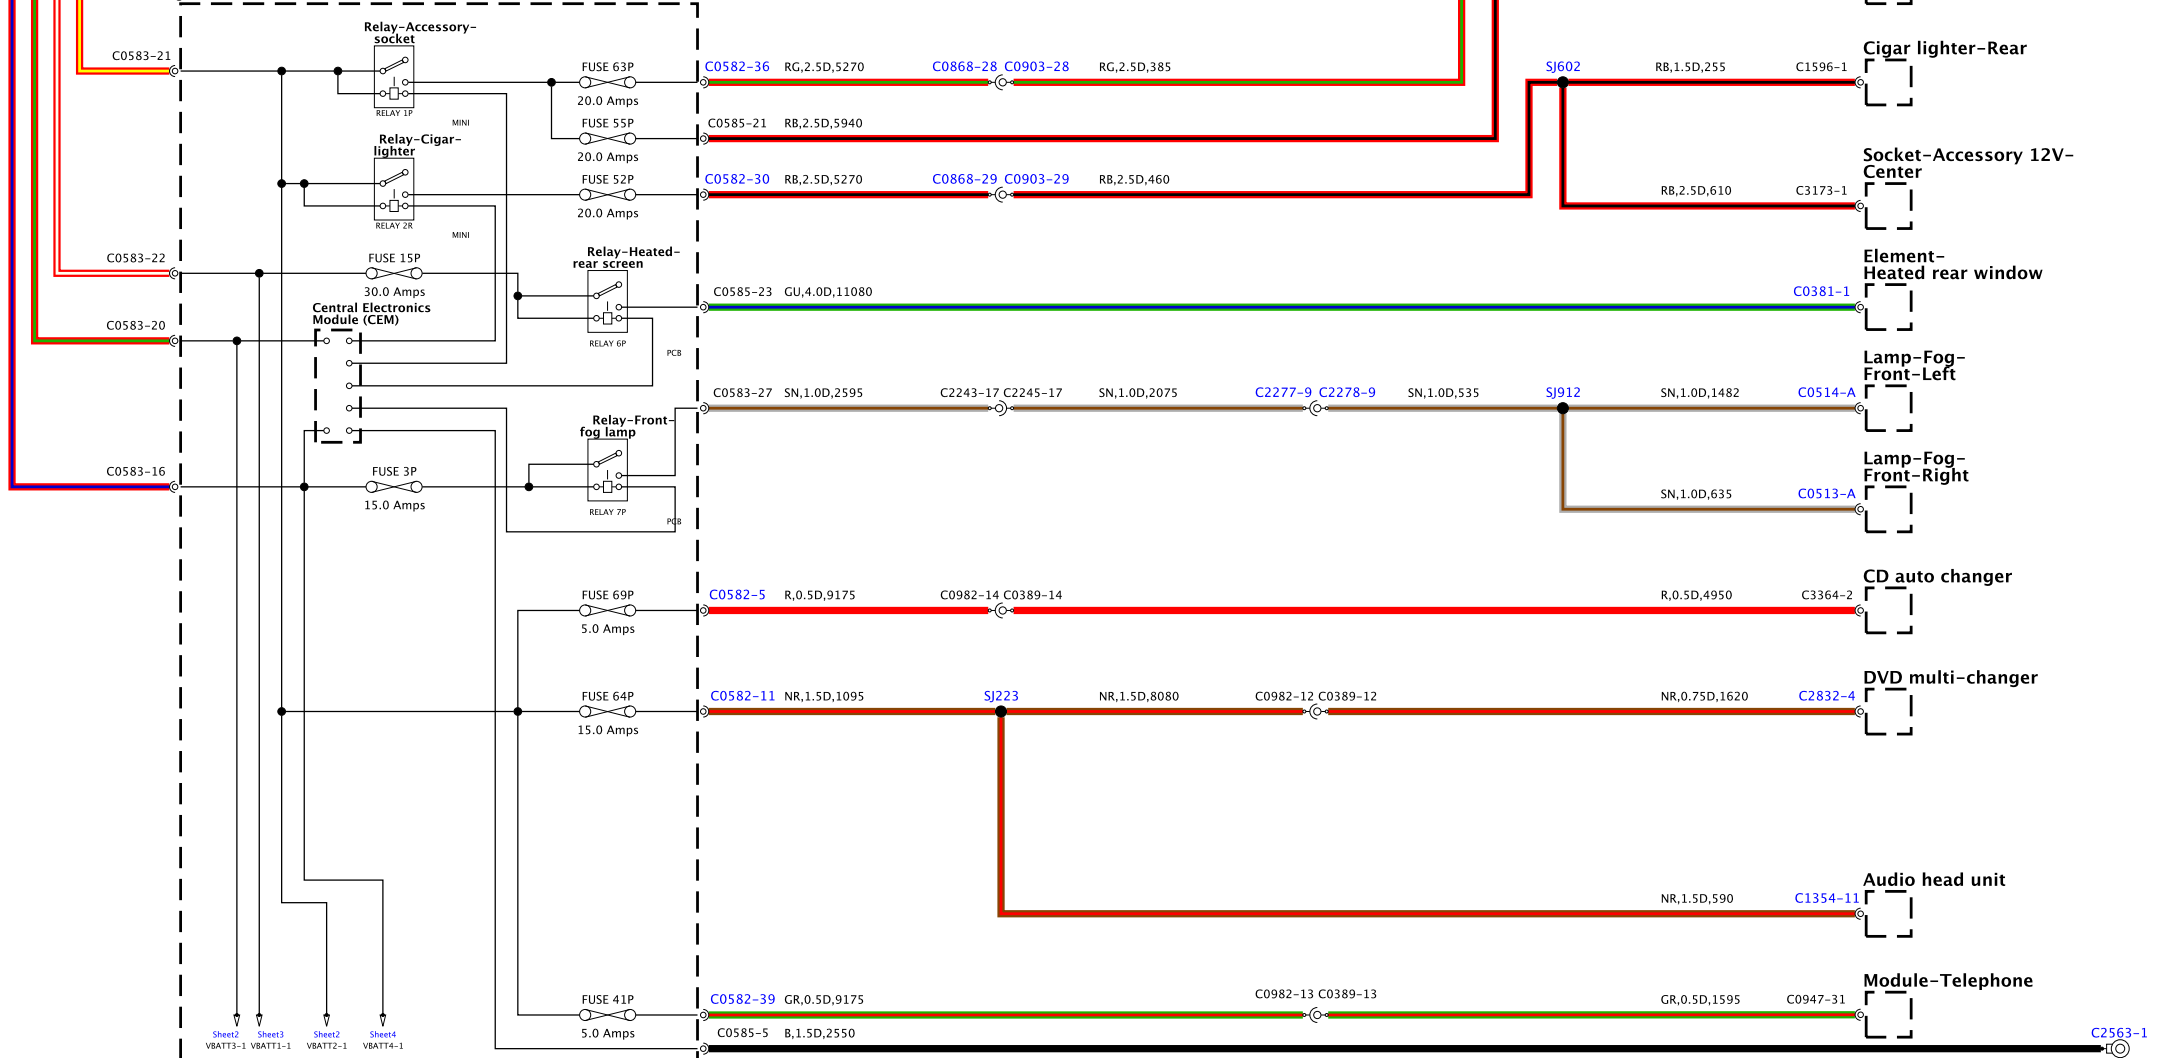


BH42-2010-H-A-02-13-Service-0322-11M1-0R01

Junction box-Central

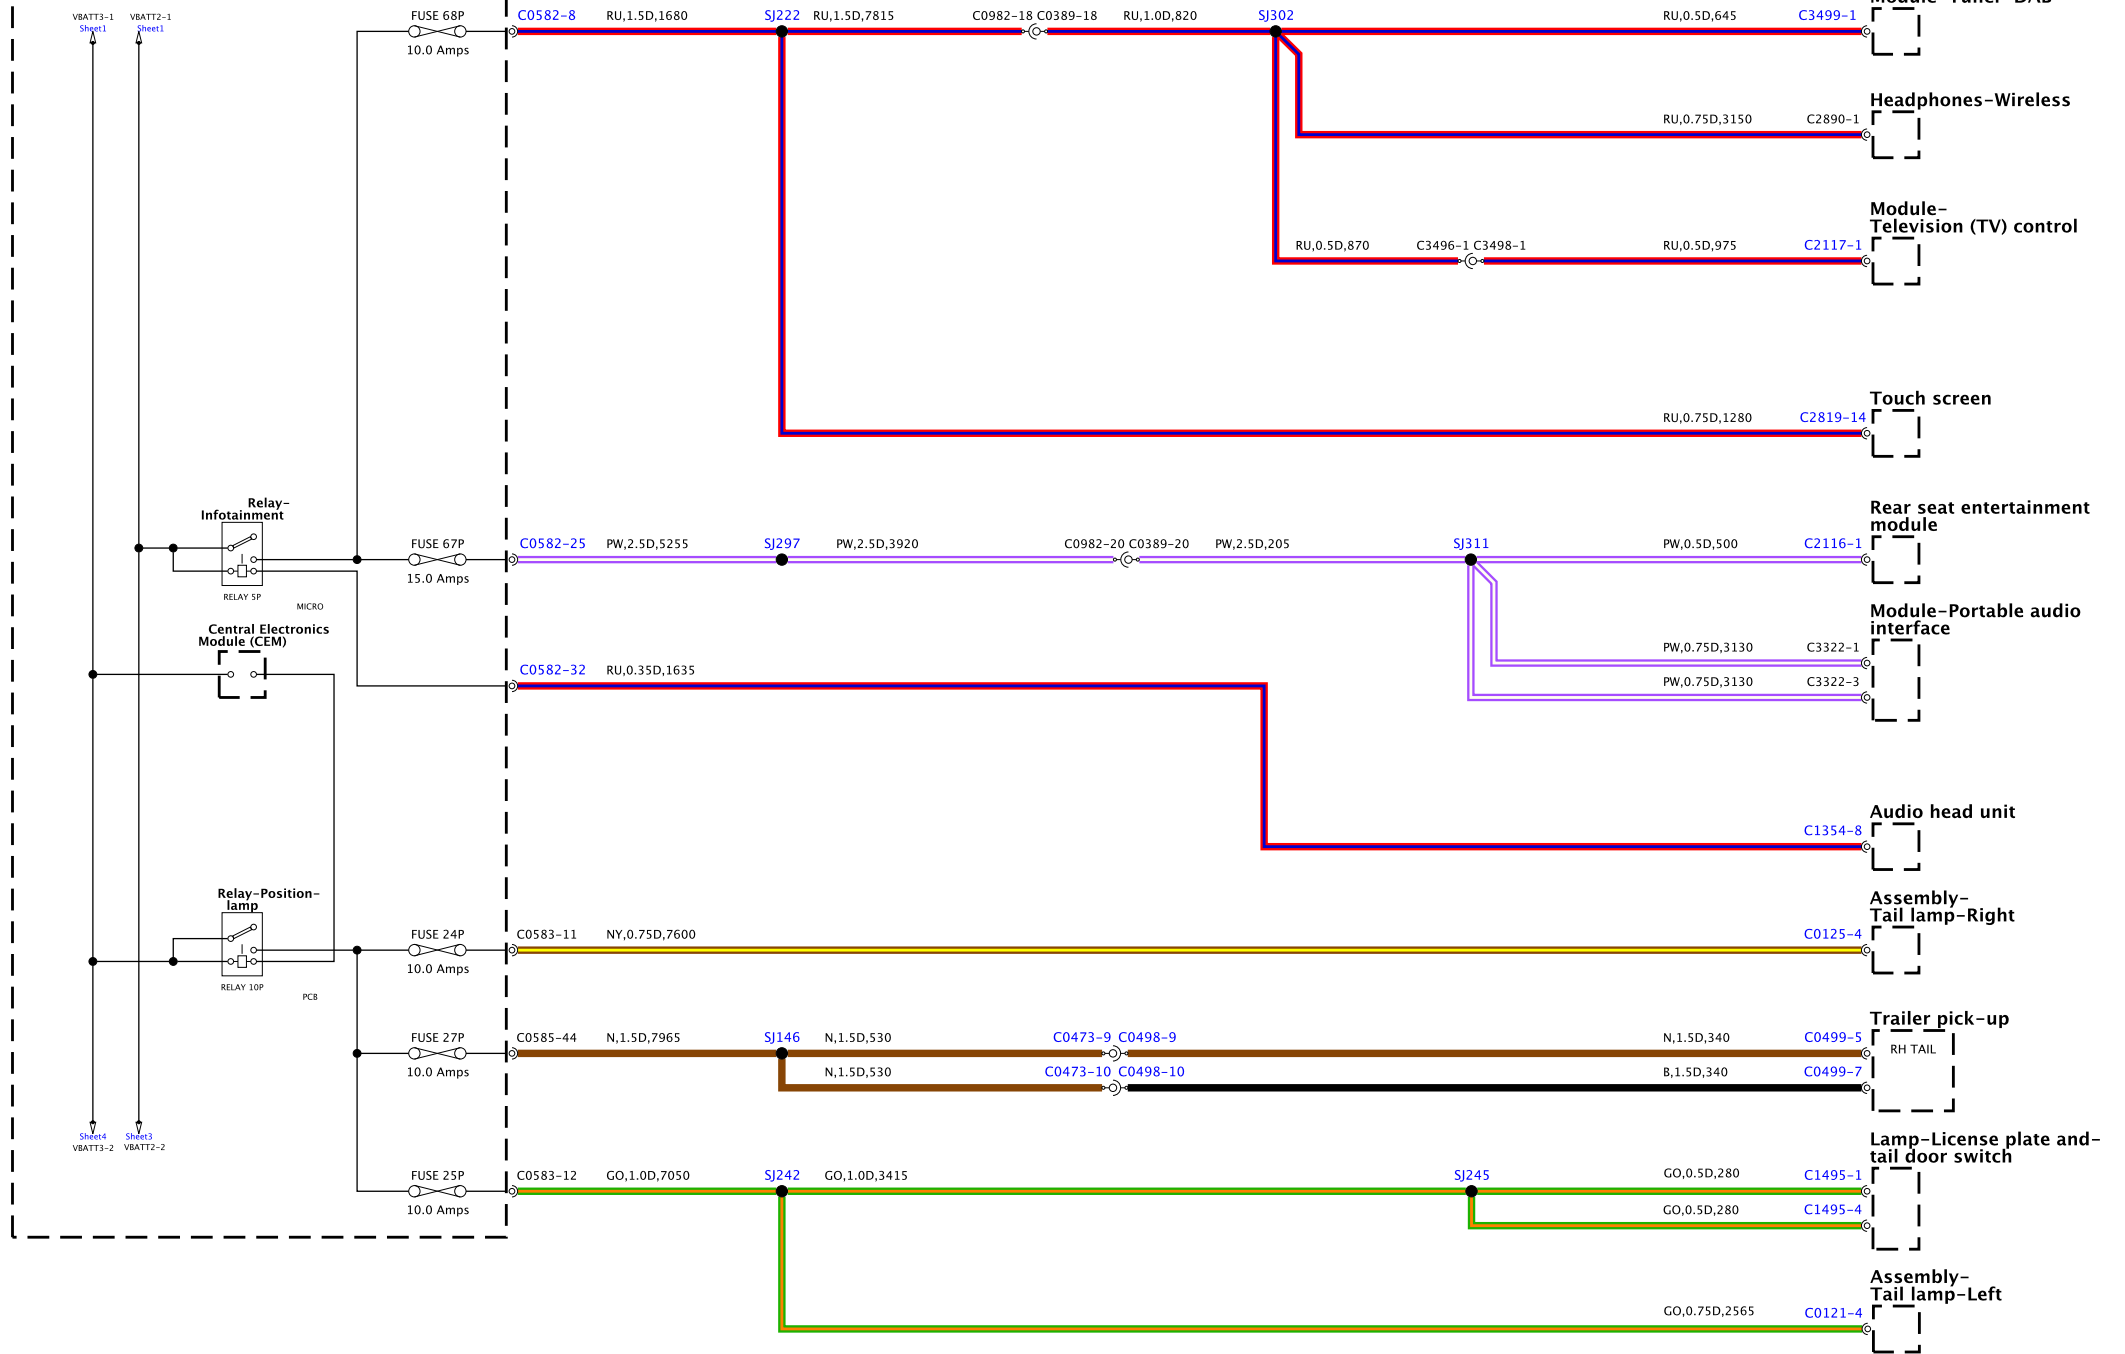


BH42-70010-H-A-03-13-Service (L322-11MY-J081)


Junction box-Central

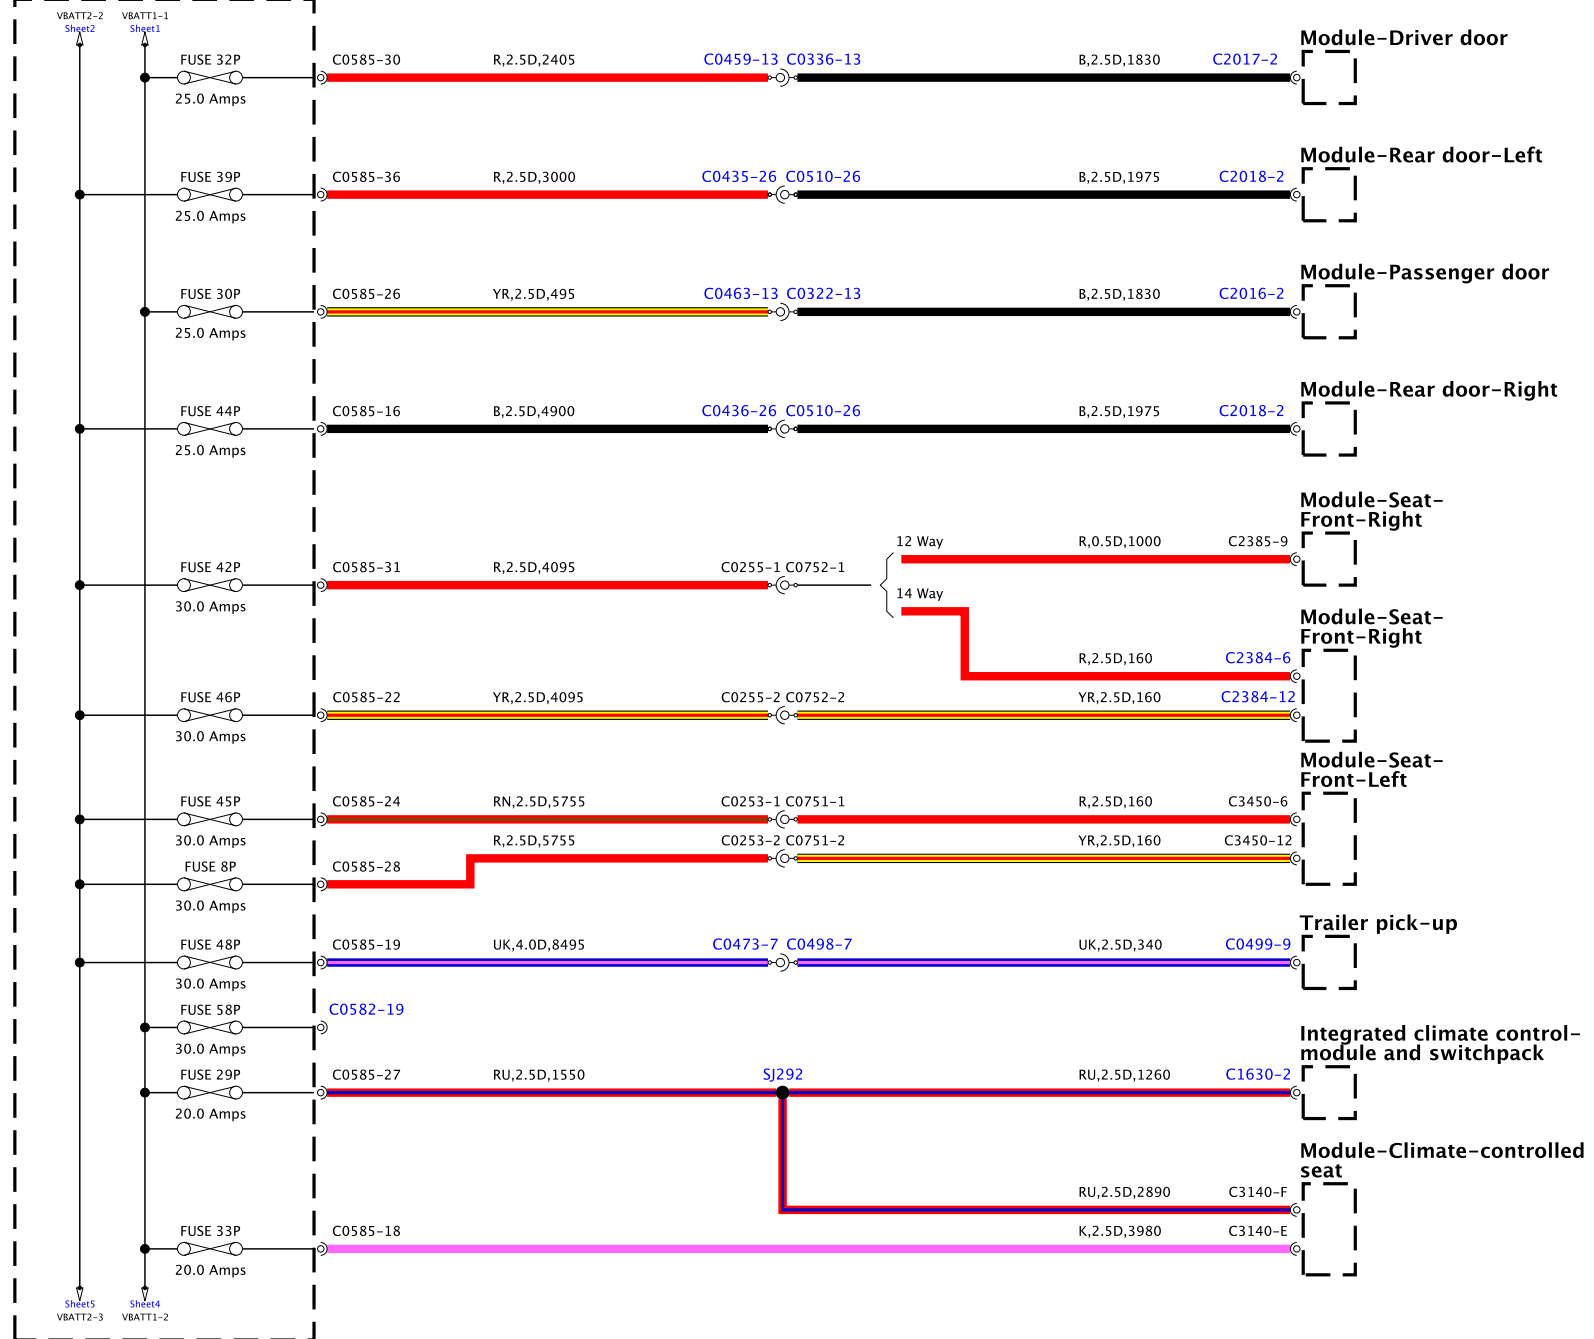

Junction box-Central

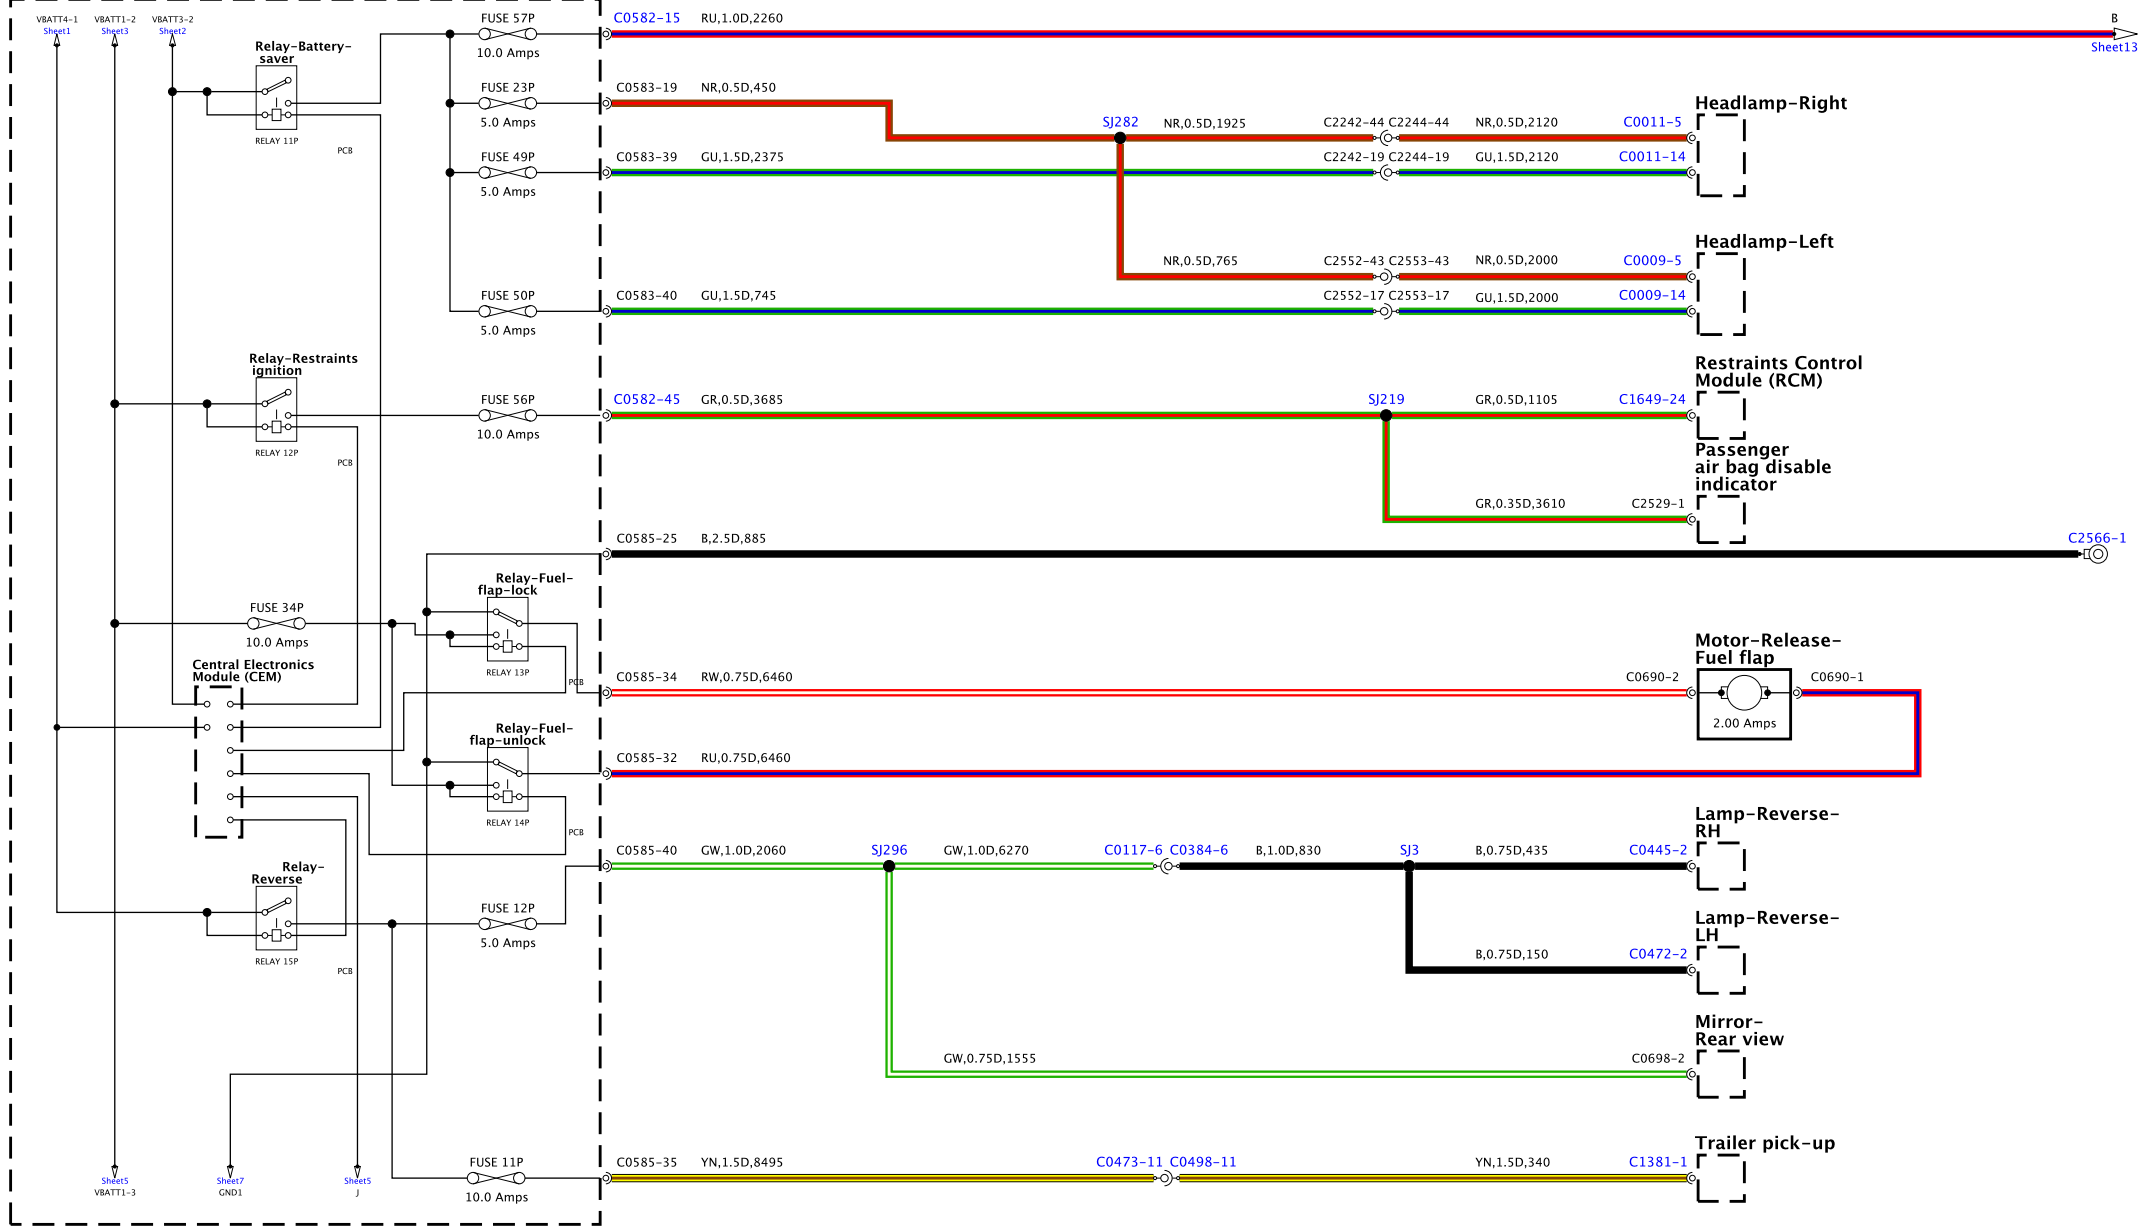


Junction box-Central

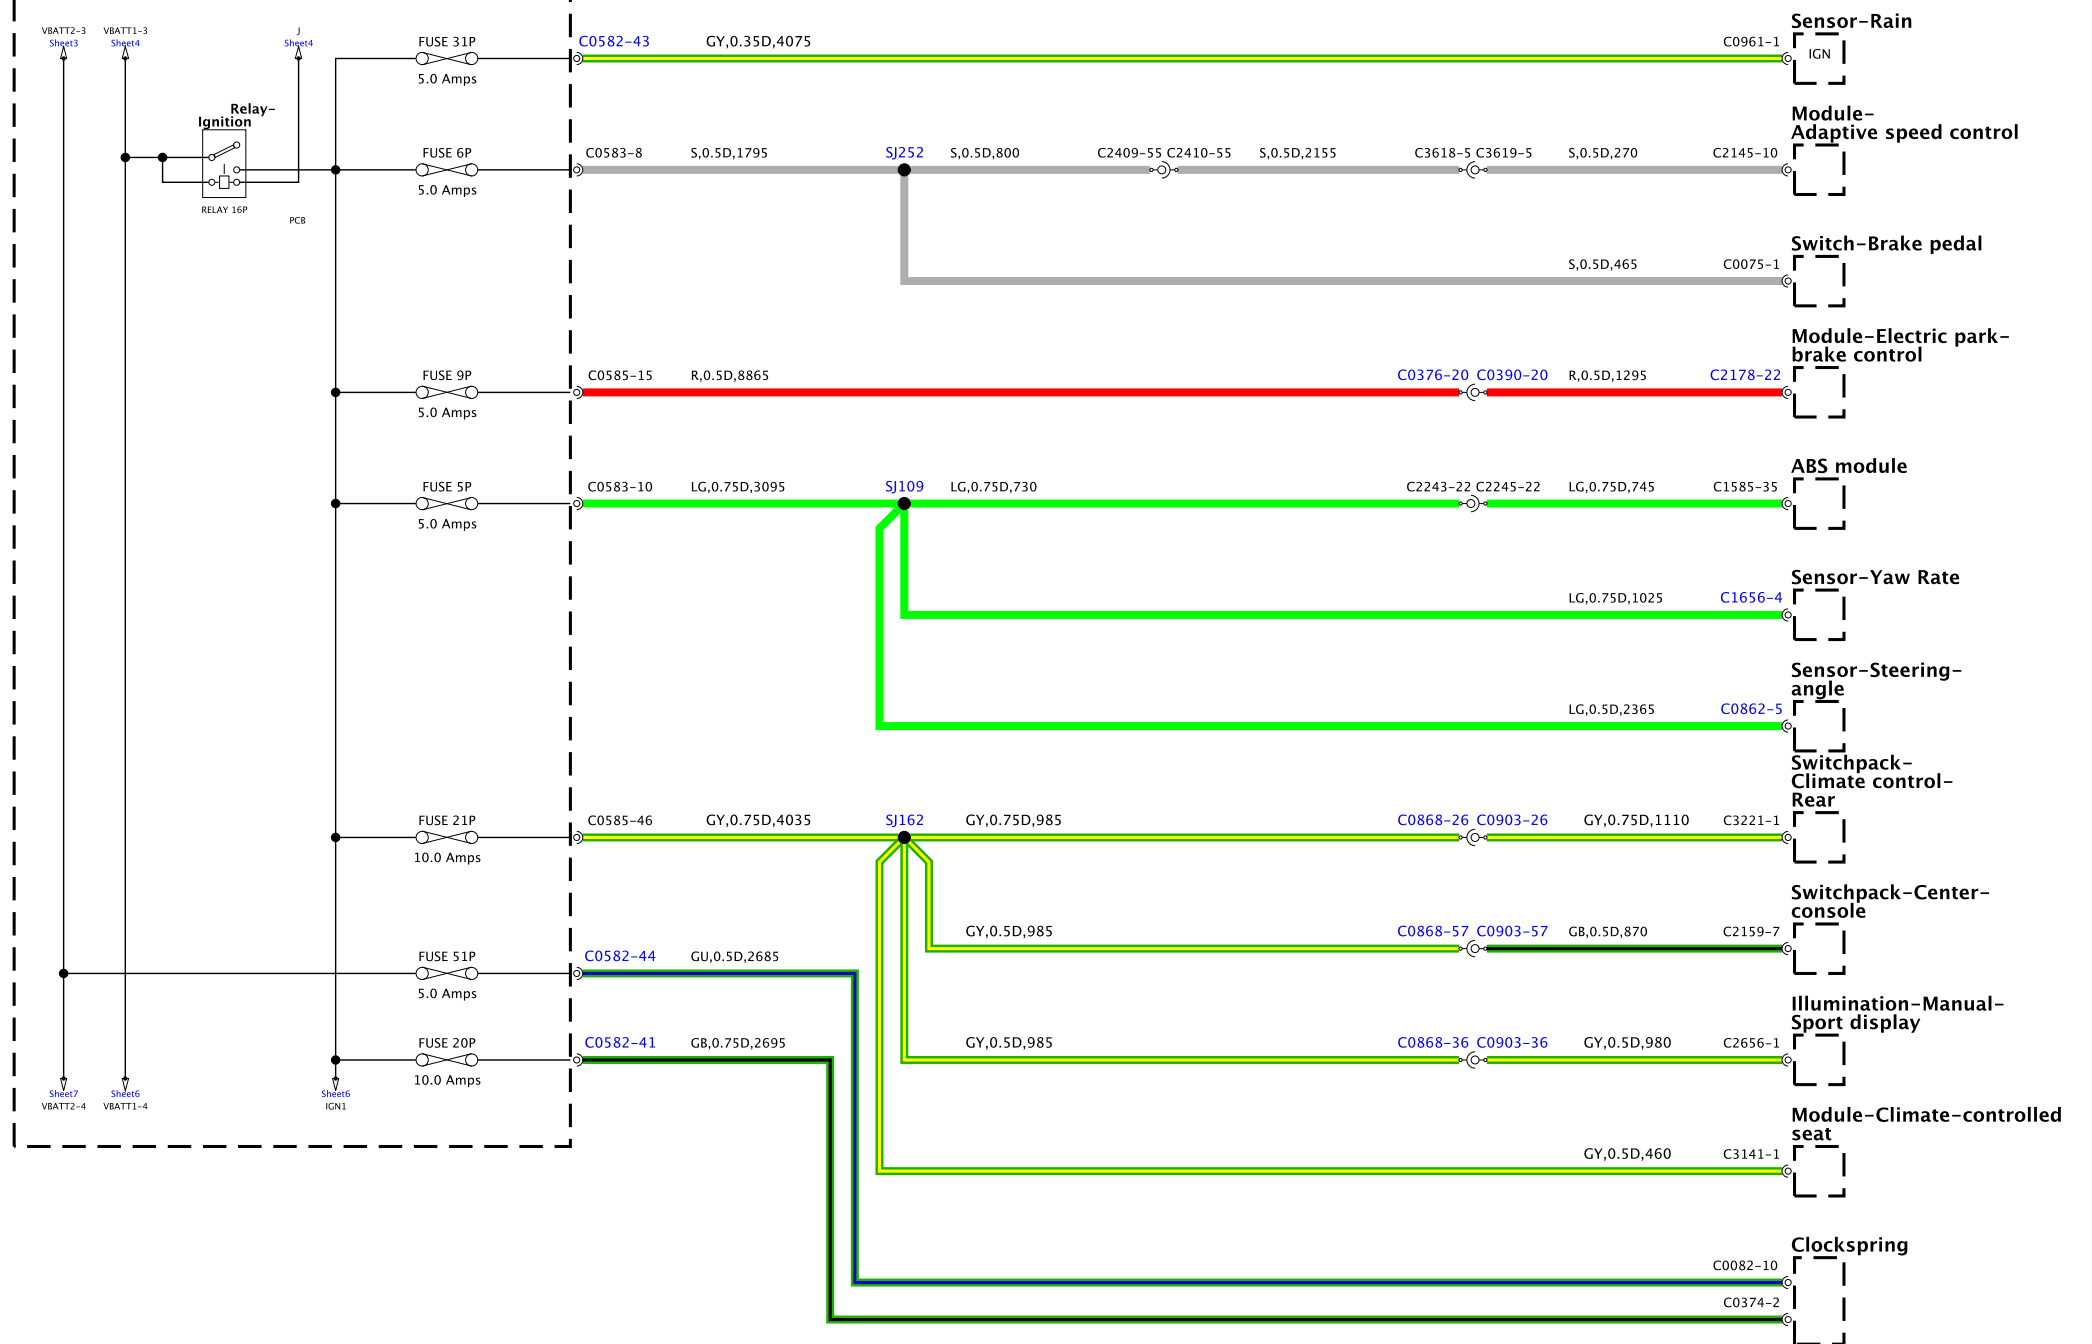


BH42-70010-H-A-06-13-Service (322-11MY-0081)

Junction box-Central

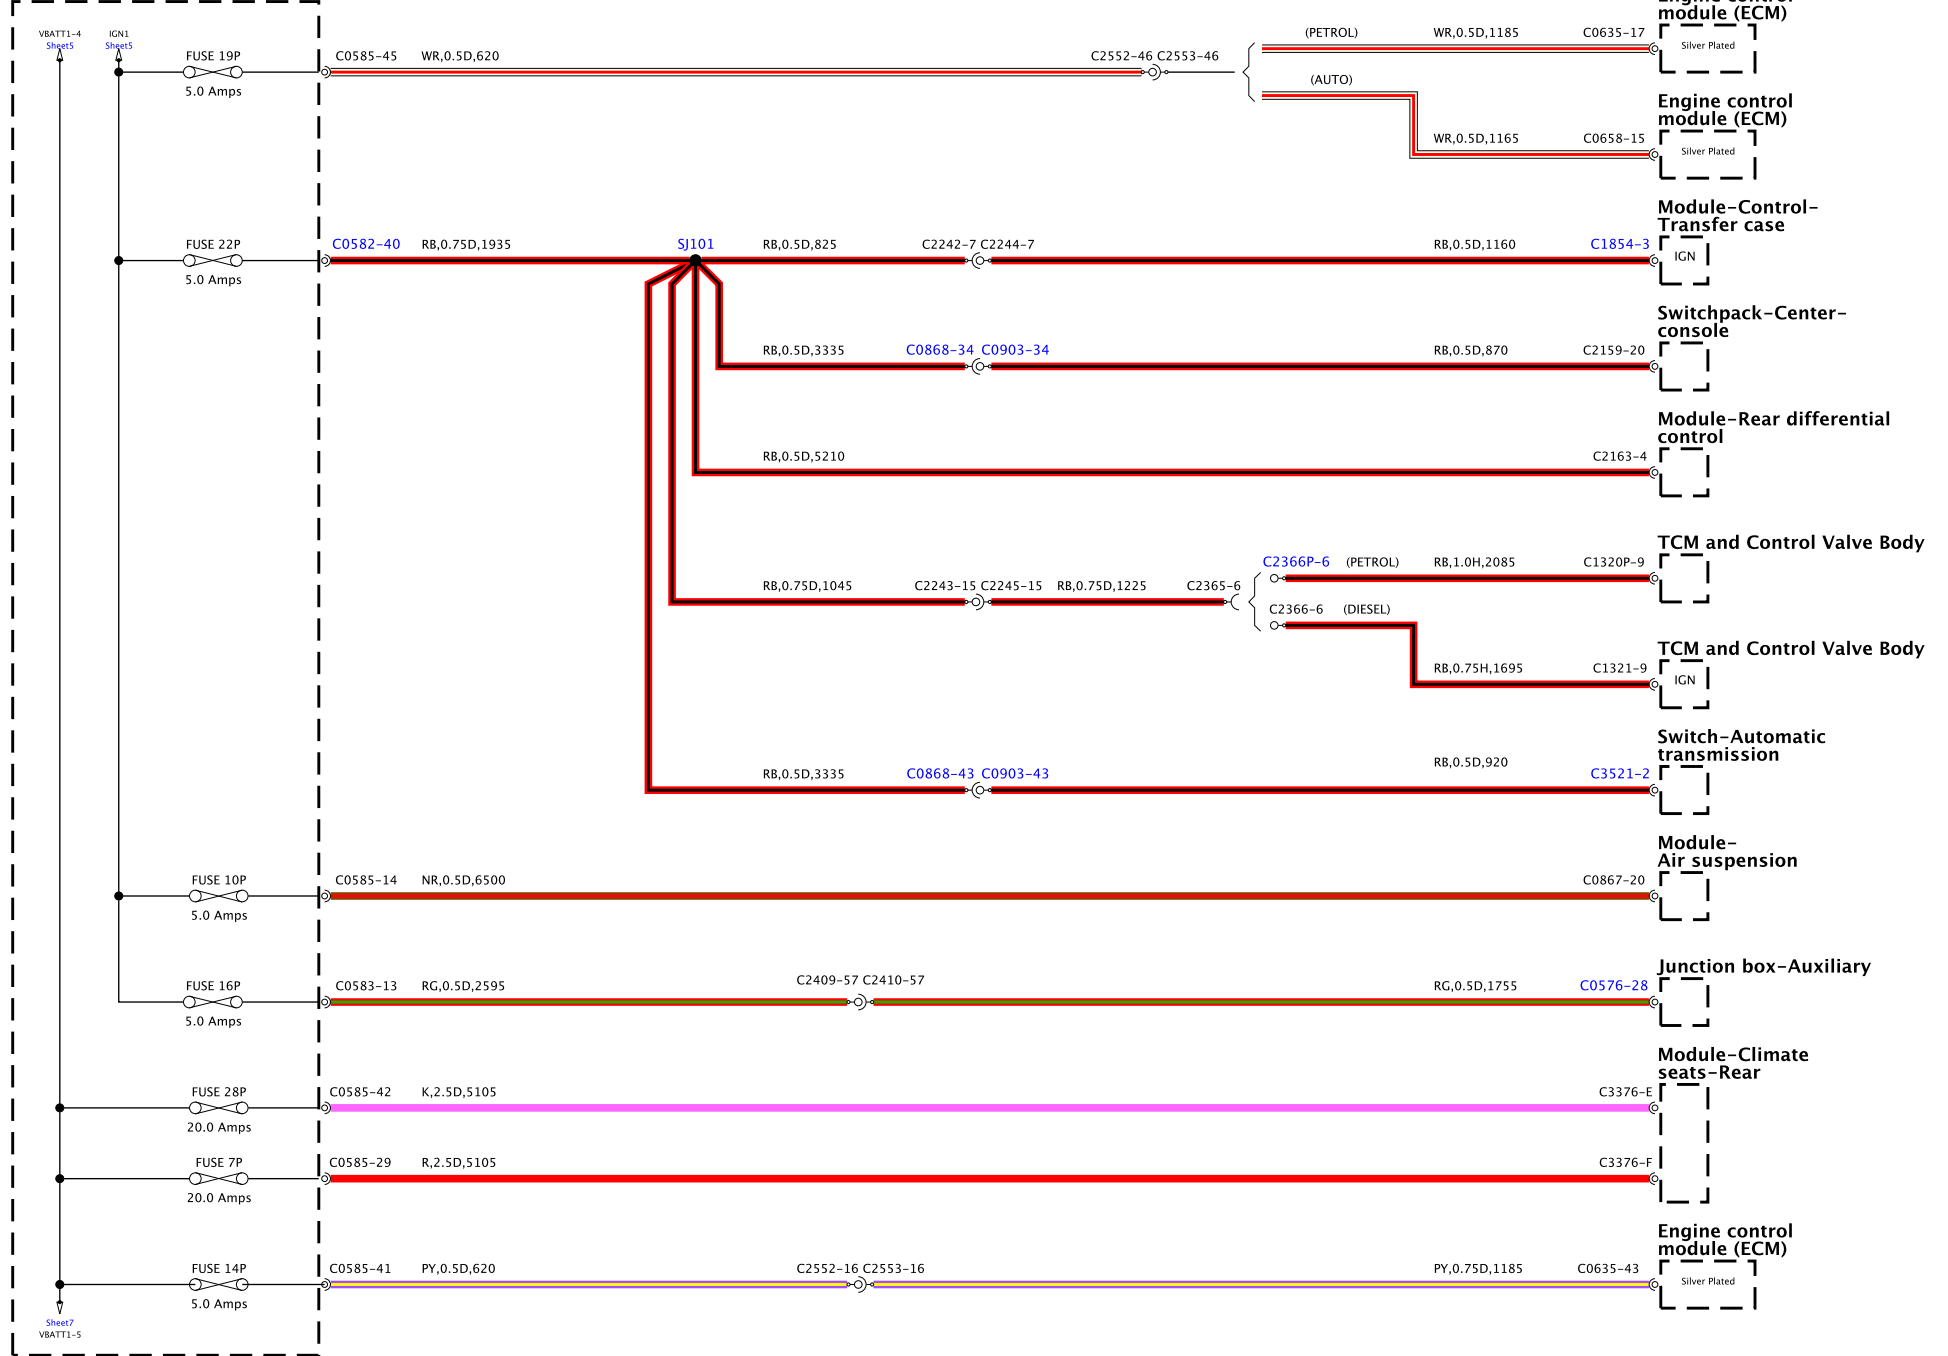


BH42-70010-H-A-07-13-Service (3322-11MY) (003)

Junction box-Central

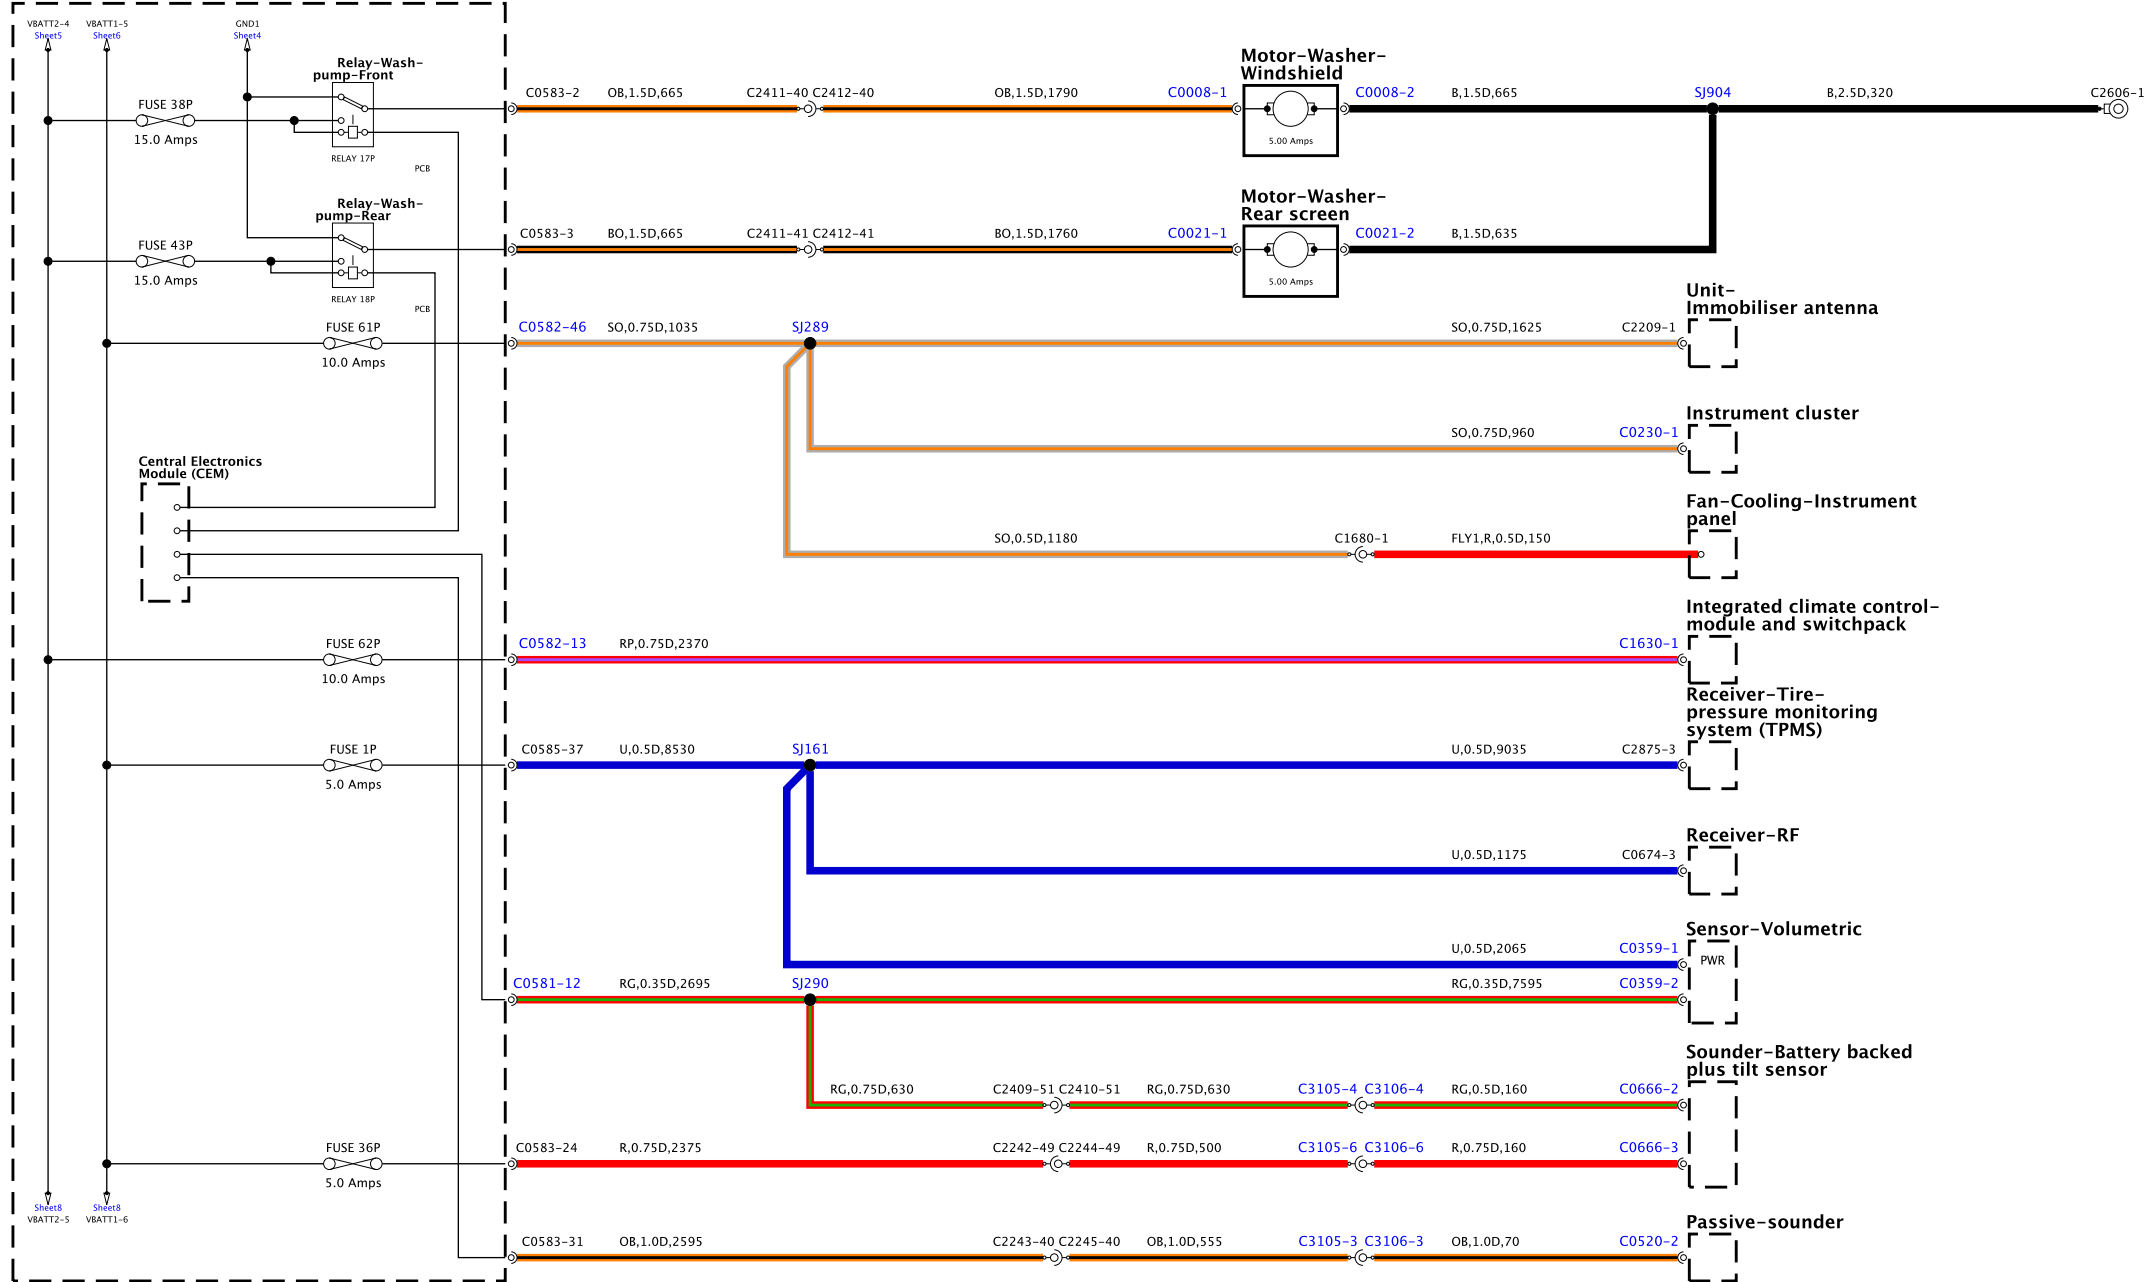



BH42-20010-HA-08-13-Service (322-11MY-30E1)


Junction box-Central

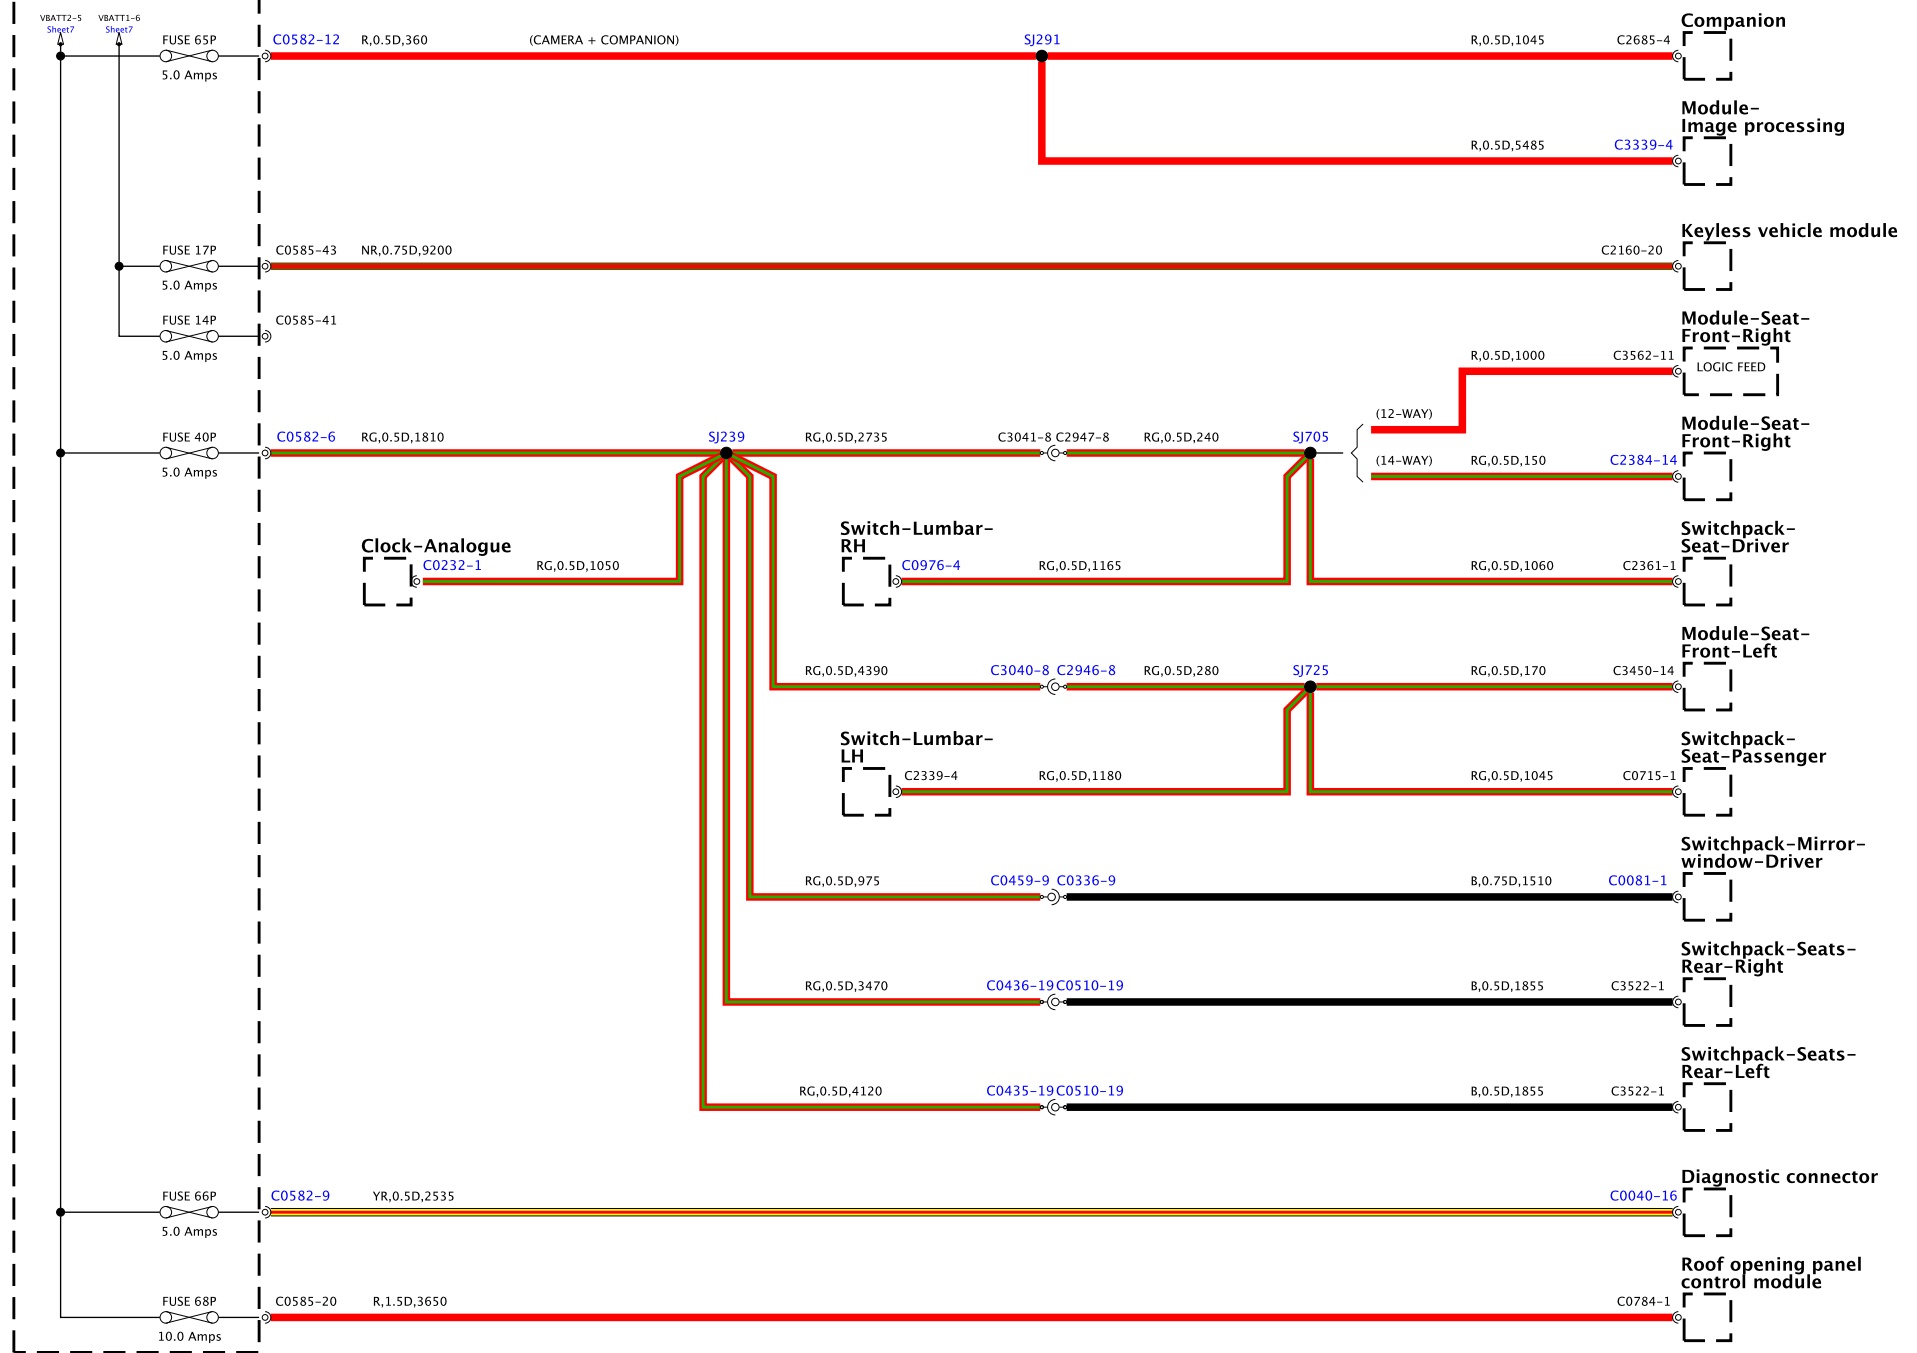


BH42-2001D-HA-09-13-Service 8.320-11MY-0081

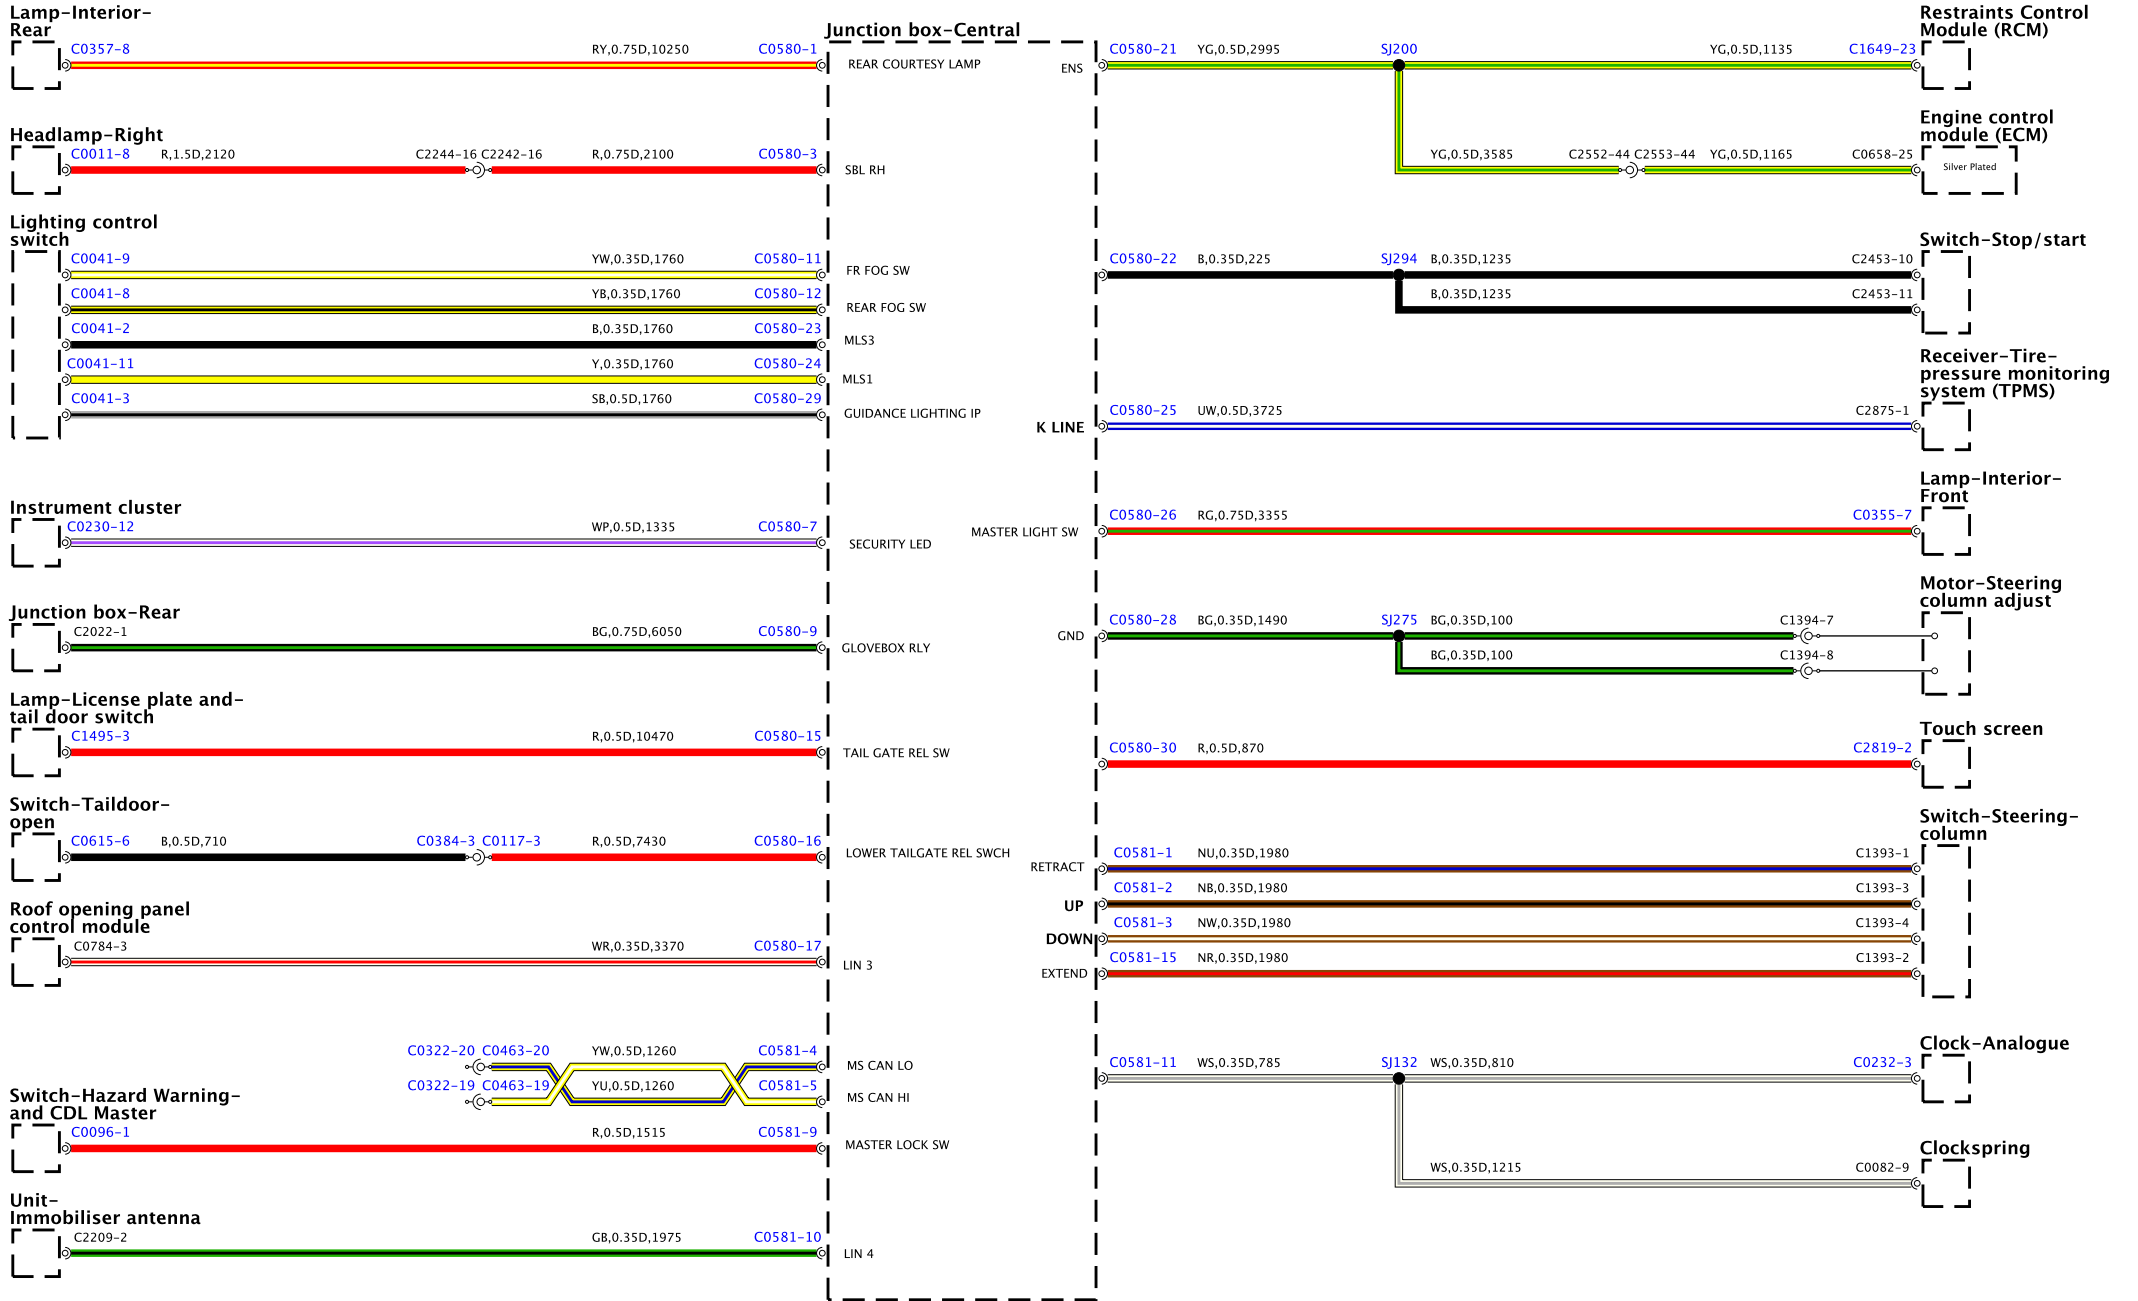

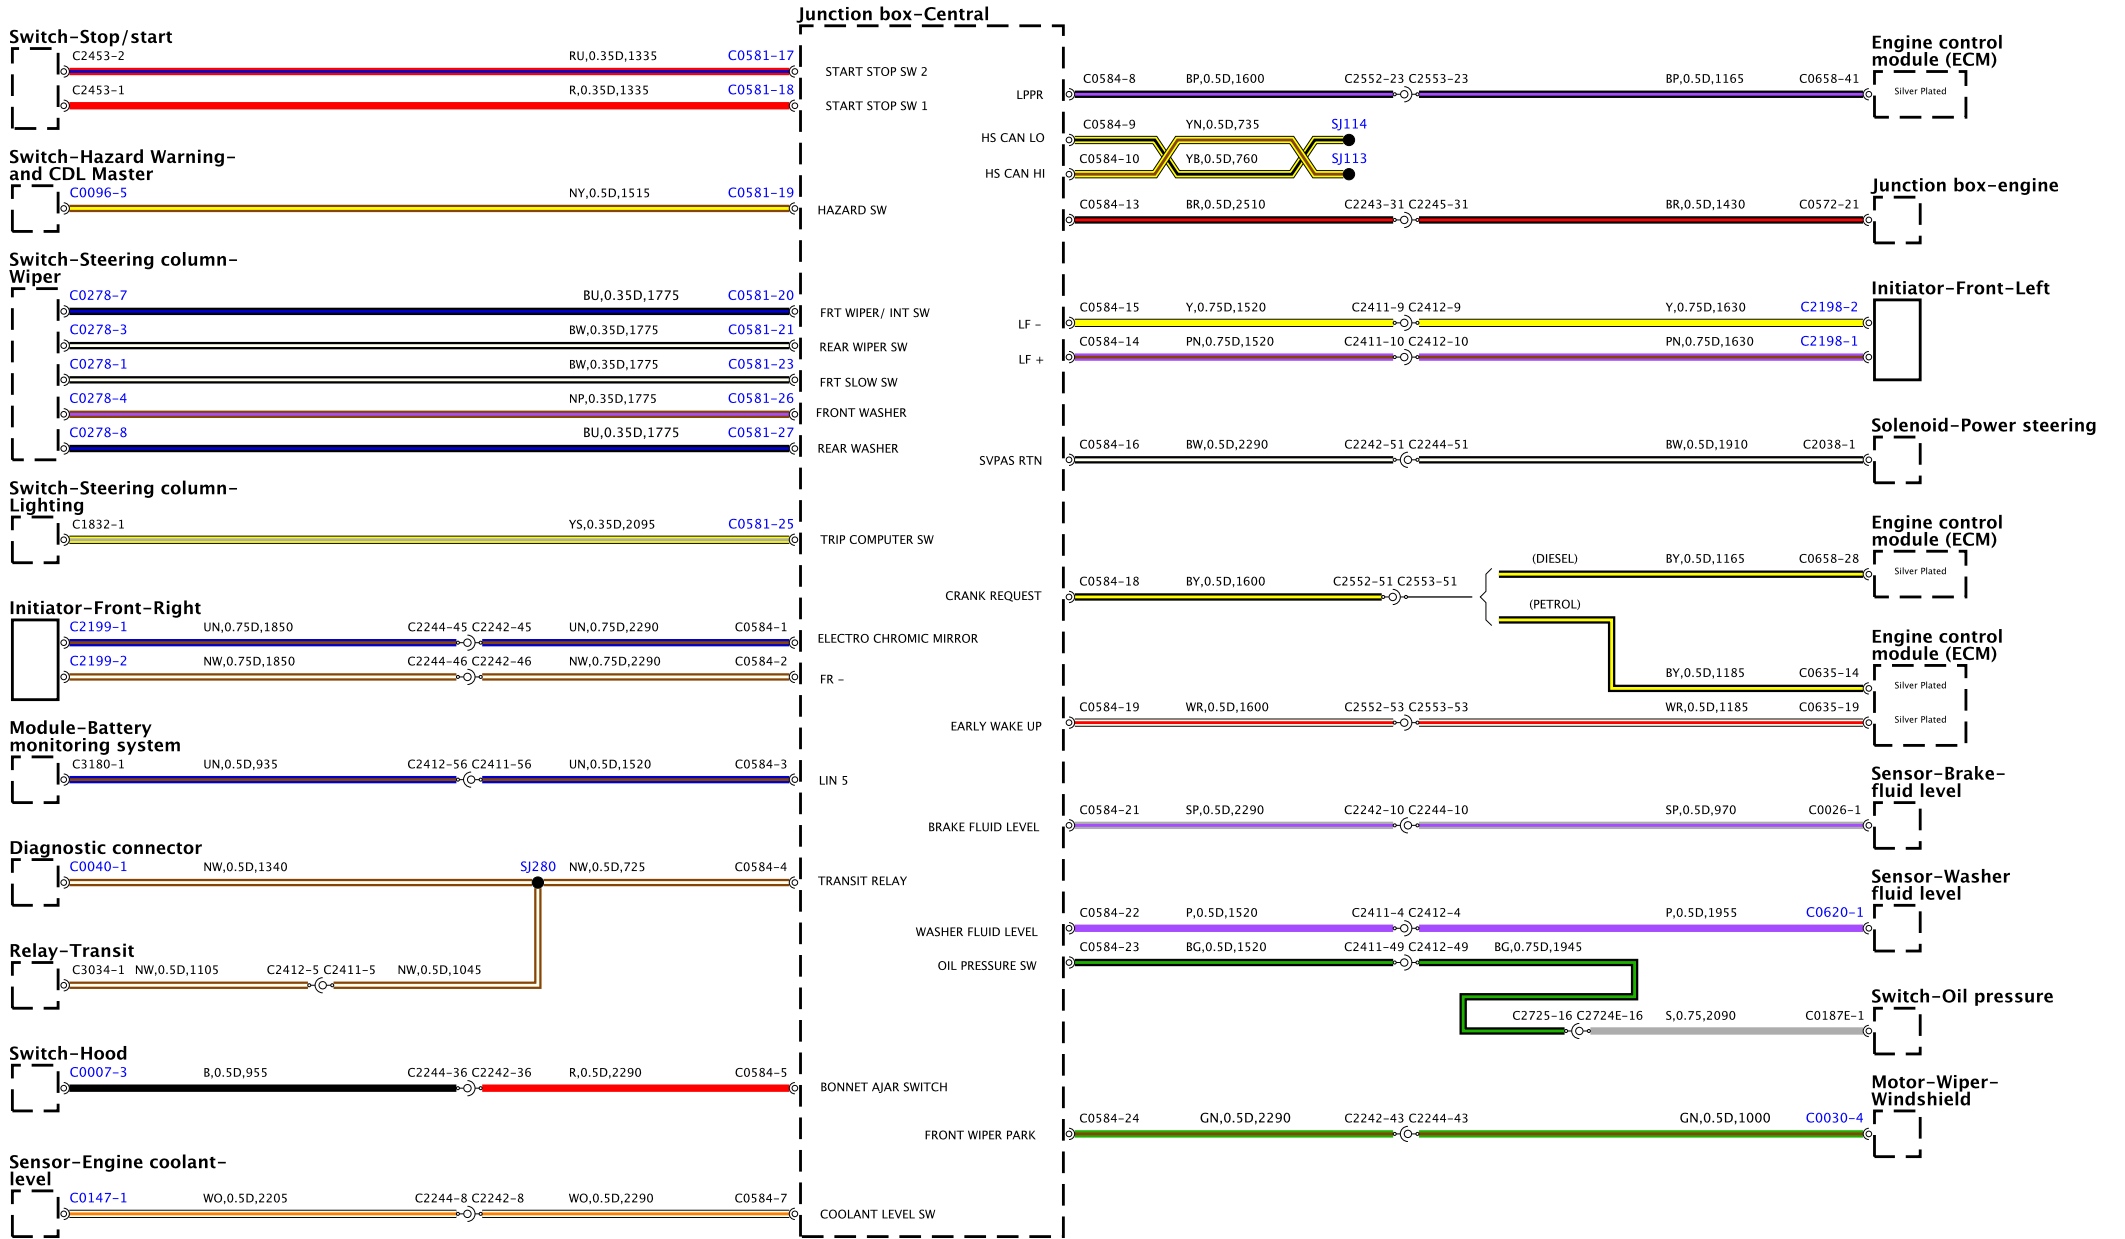

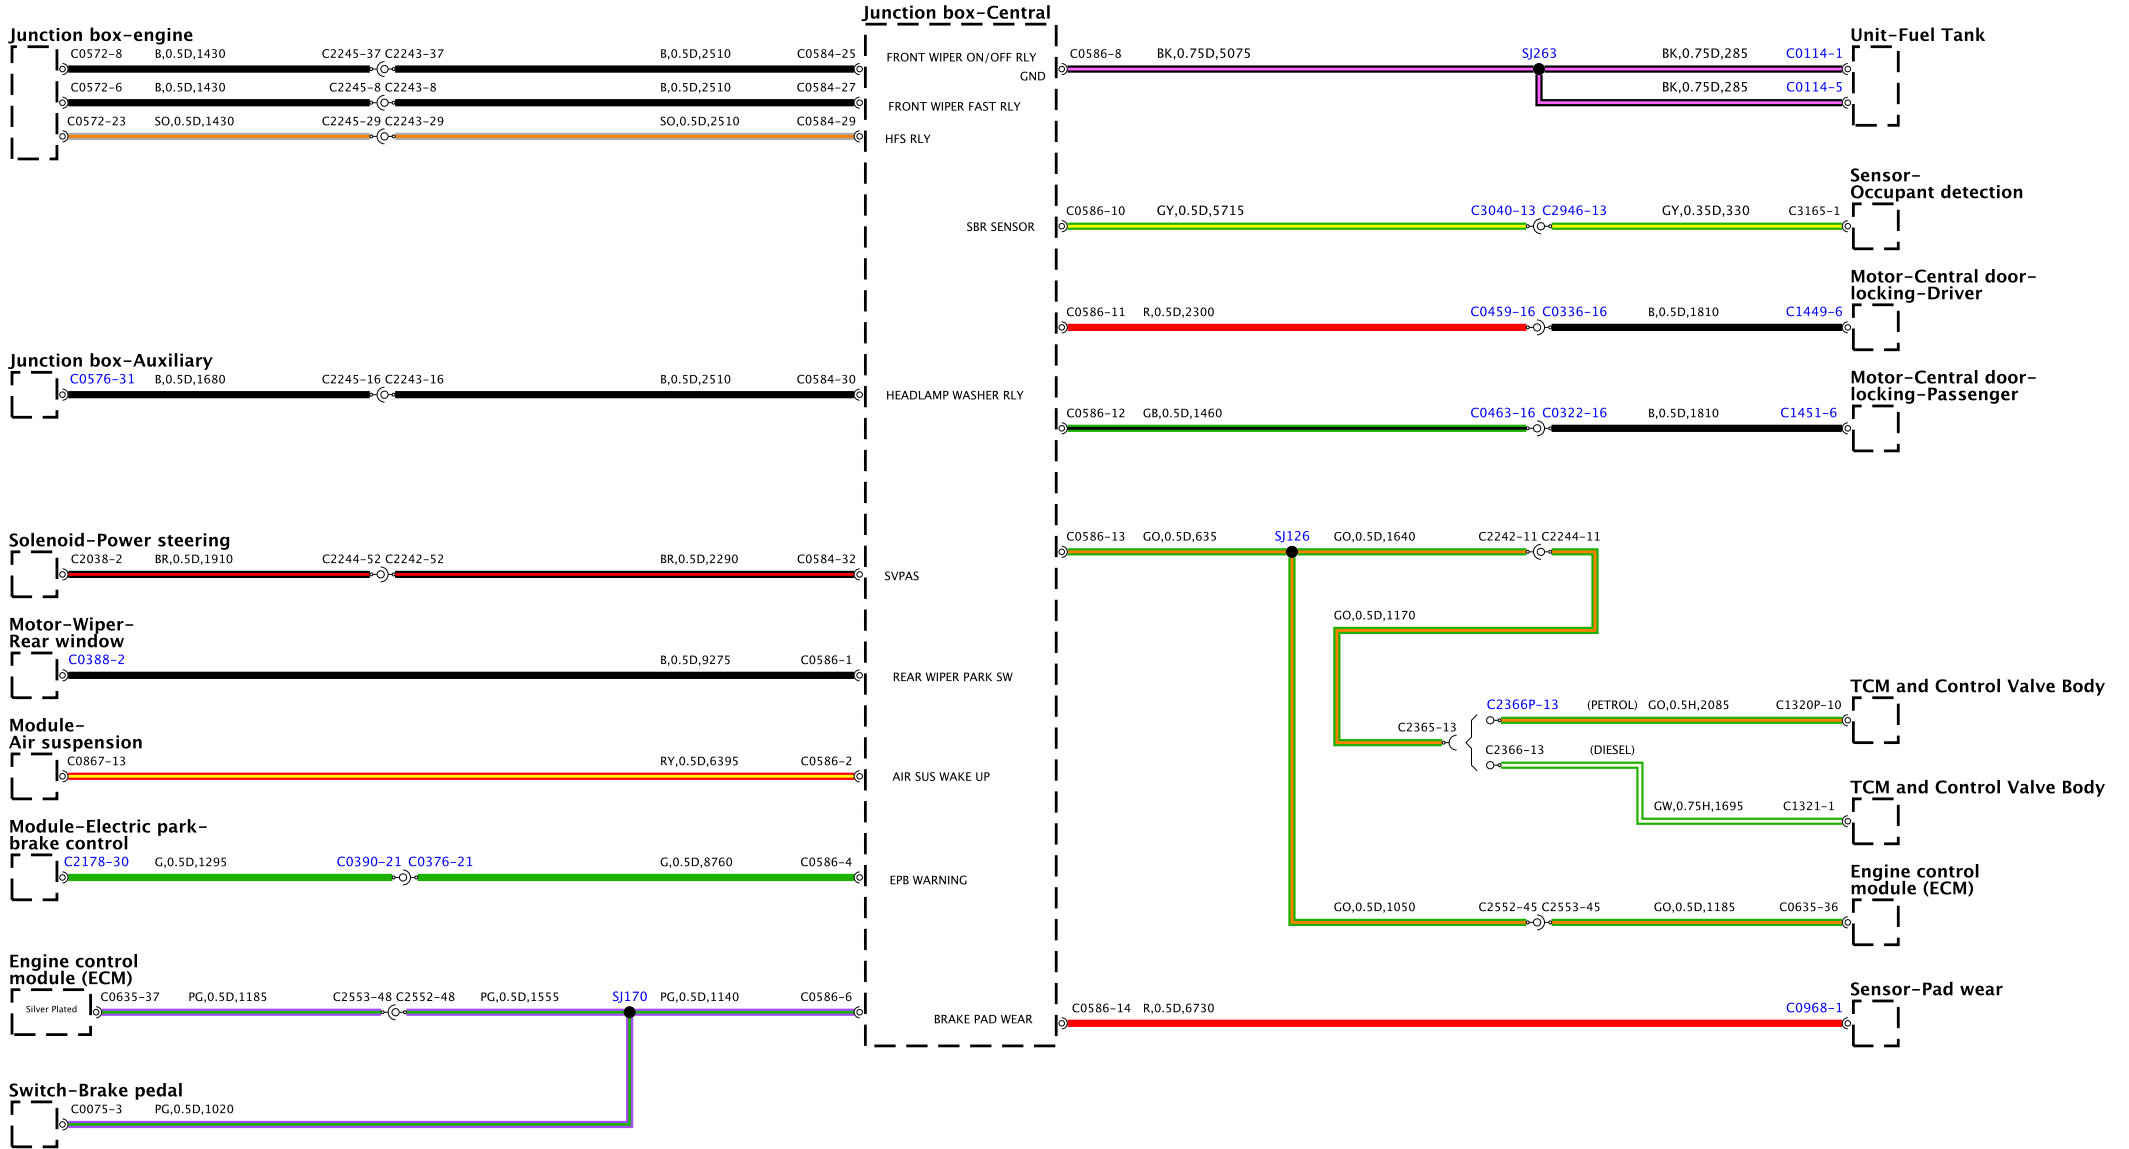

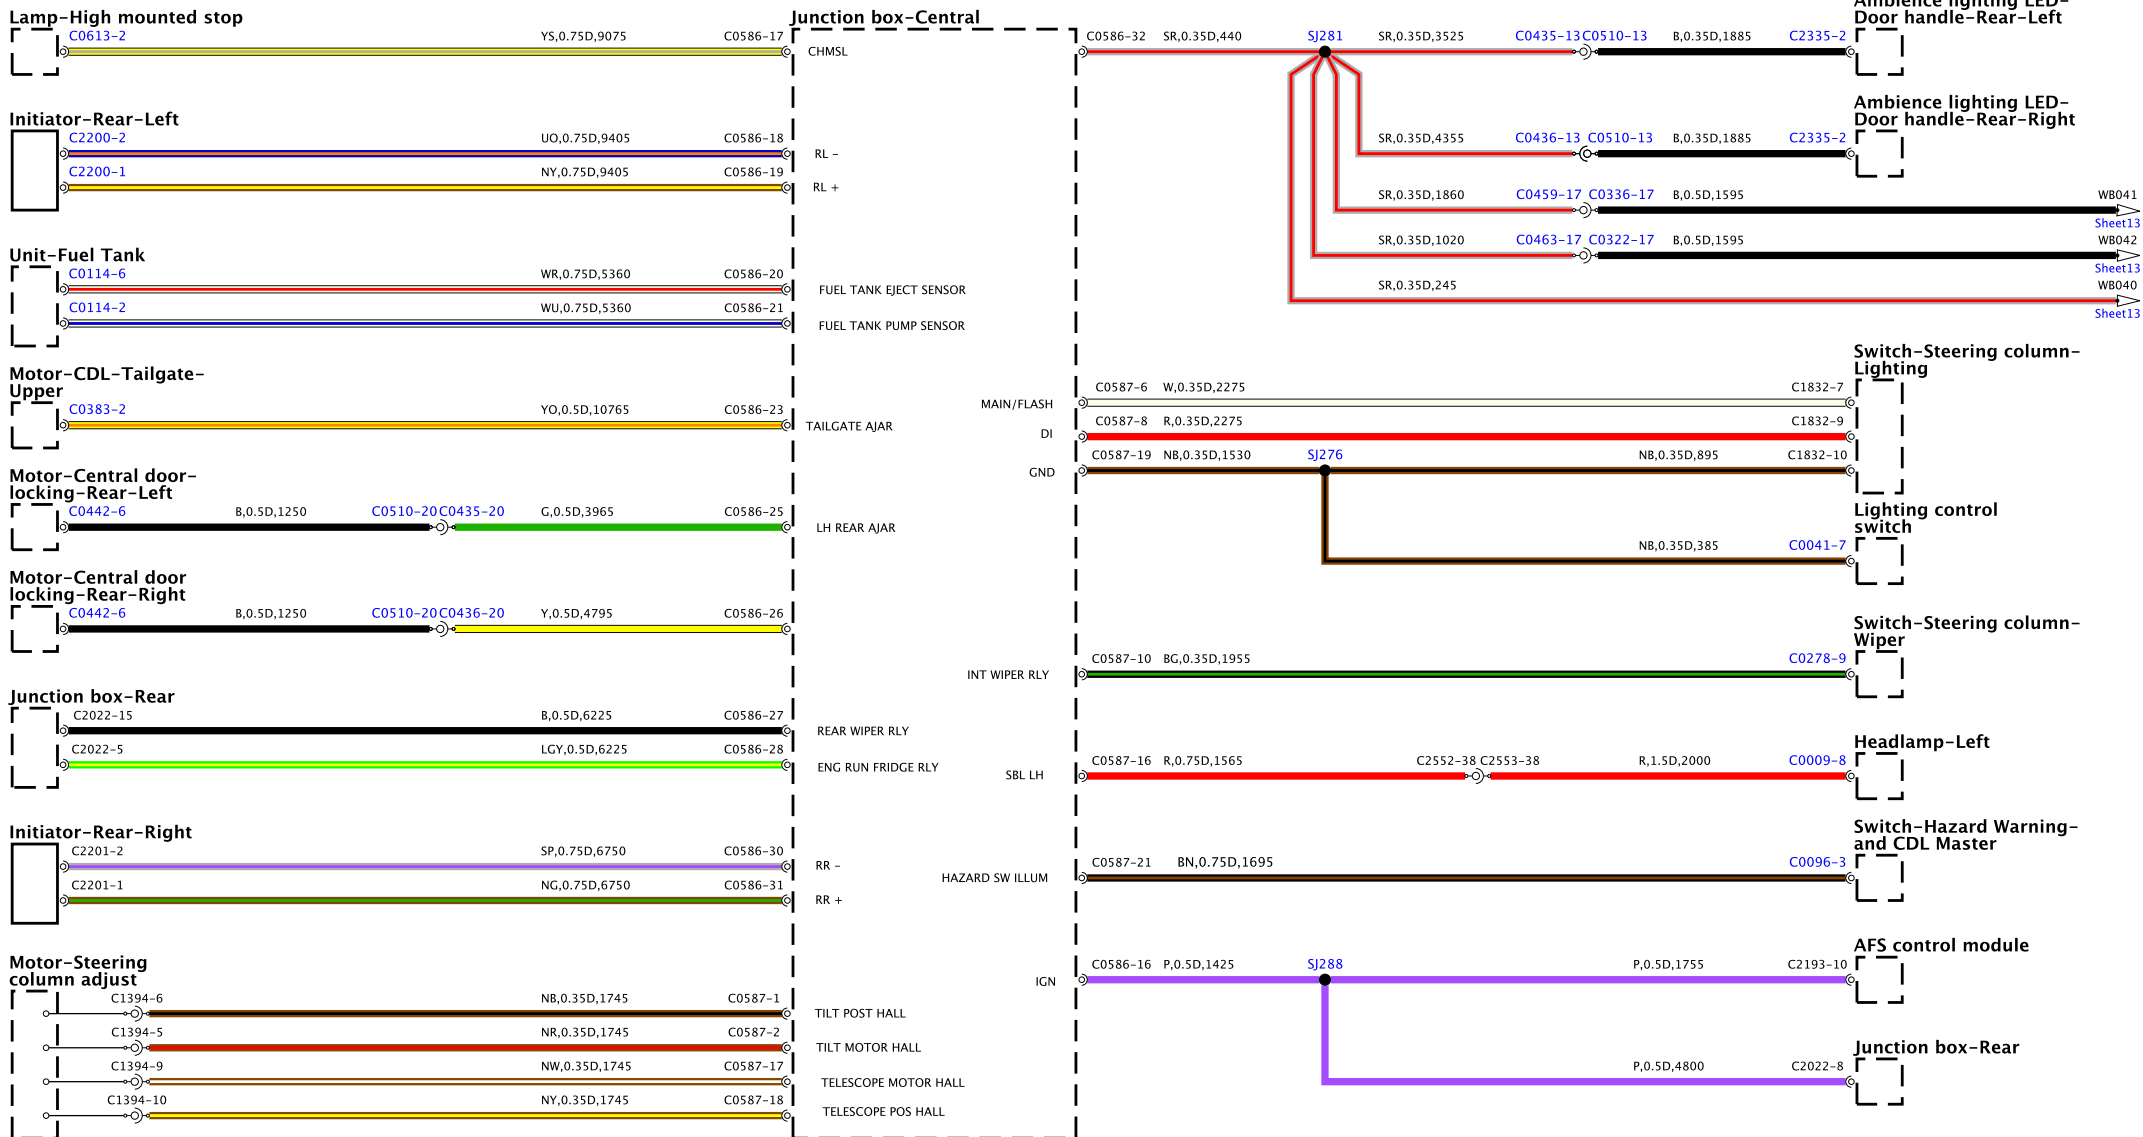

BH42-70010-10-A-11-11-Service (322-11M9-0001)

