


MODULE COMMUNICATIONS NETWORK

# QUIESCENT CURRENT CONTROL MODULE (G1561112)

REMOVAL AND INSTALLATION

<b>86.80.48</b>	<b>QUIESCENT CURRENT CONTROL MODULE - RENEW</b>	<b>ALL DERIVATIVES</b>	<b>0.10</b>	<b>USED WITHINS</b>	
-----------------	---	----------------------------	-------------	---------------------	--



REMOVAL

 **NOTES:**

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. Disconnect the battery ground cable.  
Refer to: Specifications (414-00, Specifications).

2.

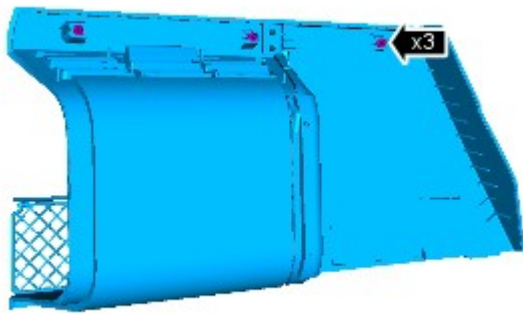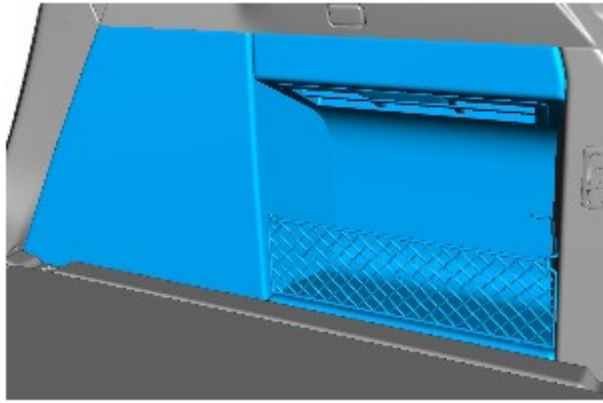

E145529

3.

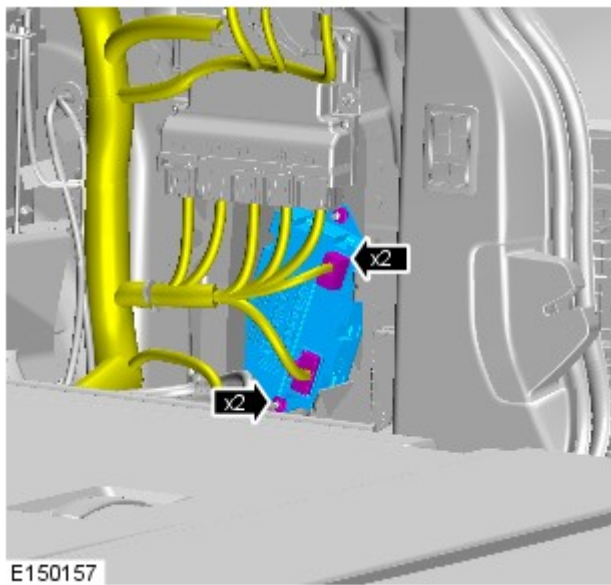

E150157

Torque: 9Nm

## INSTALLATION

---

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.